

FIGURE 6 — ADDRESS DECODING SECTION

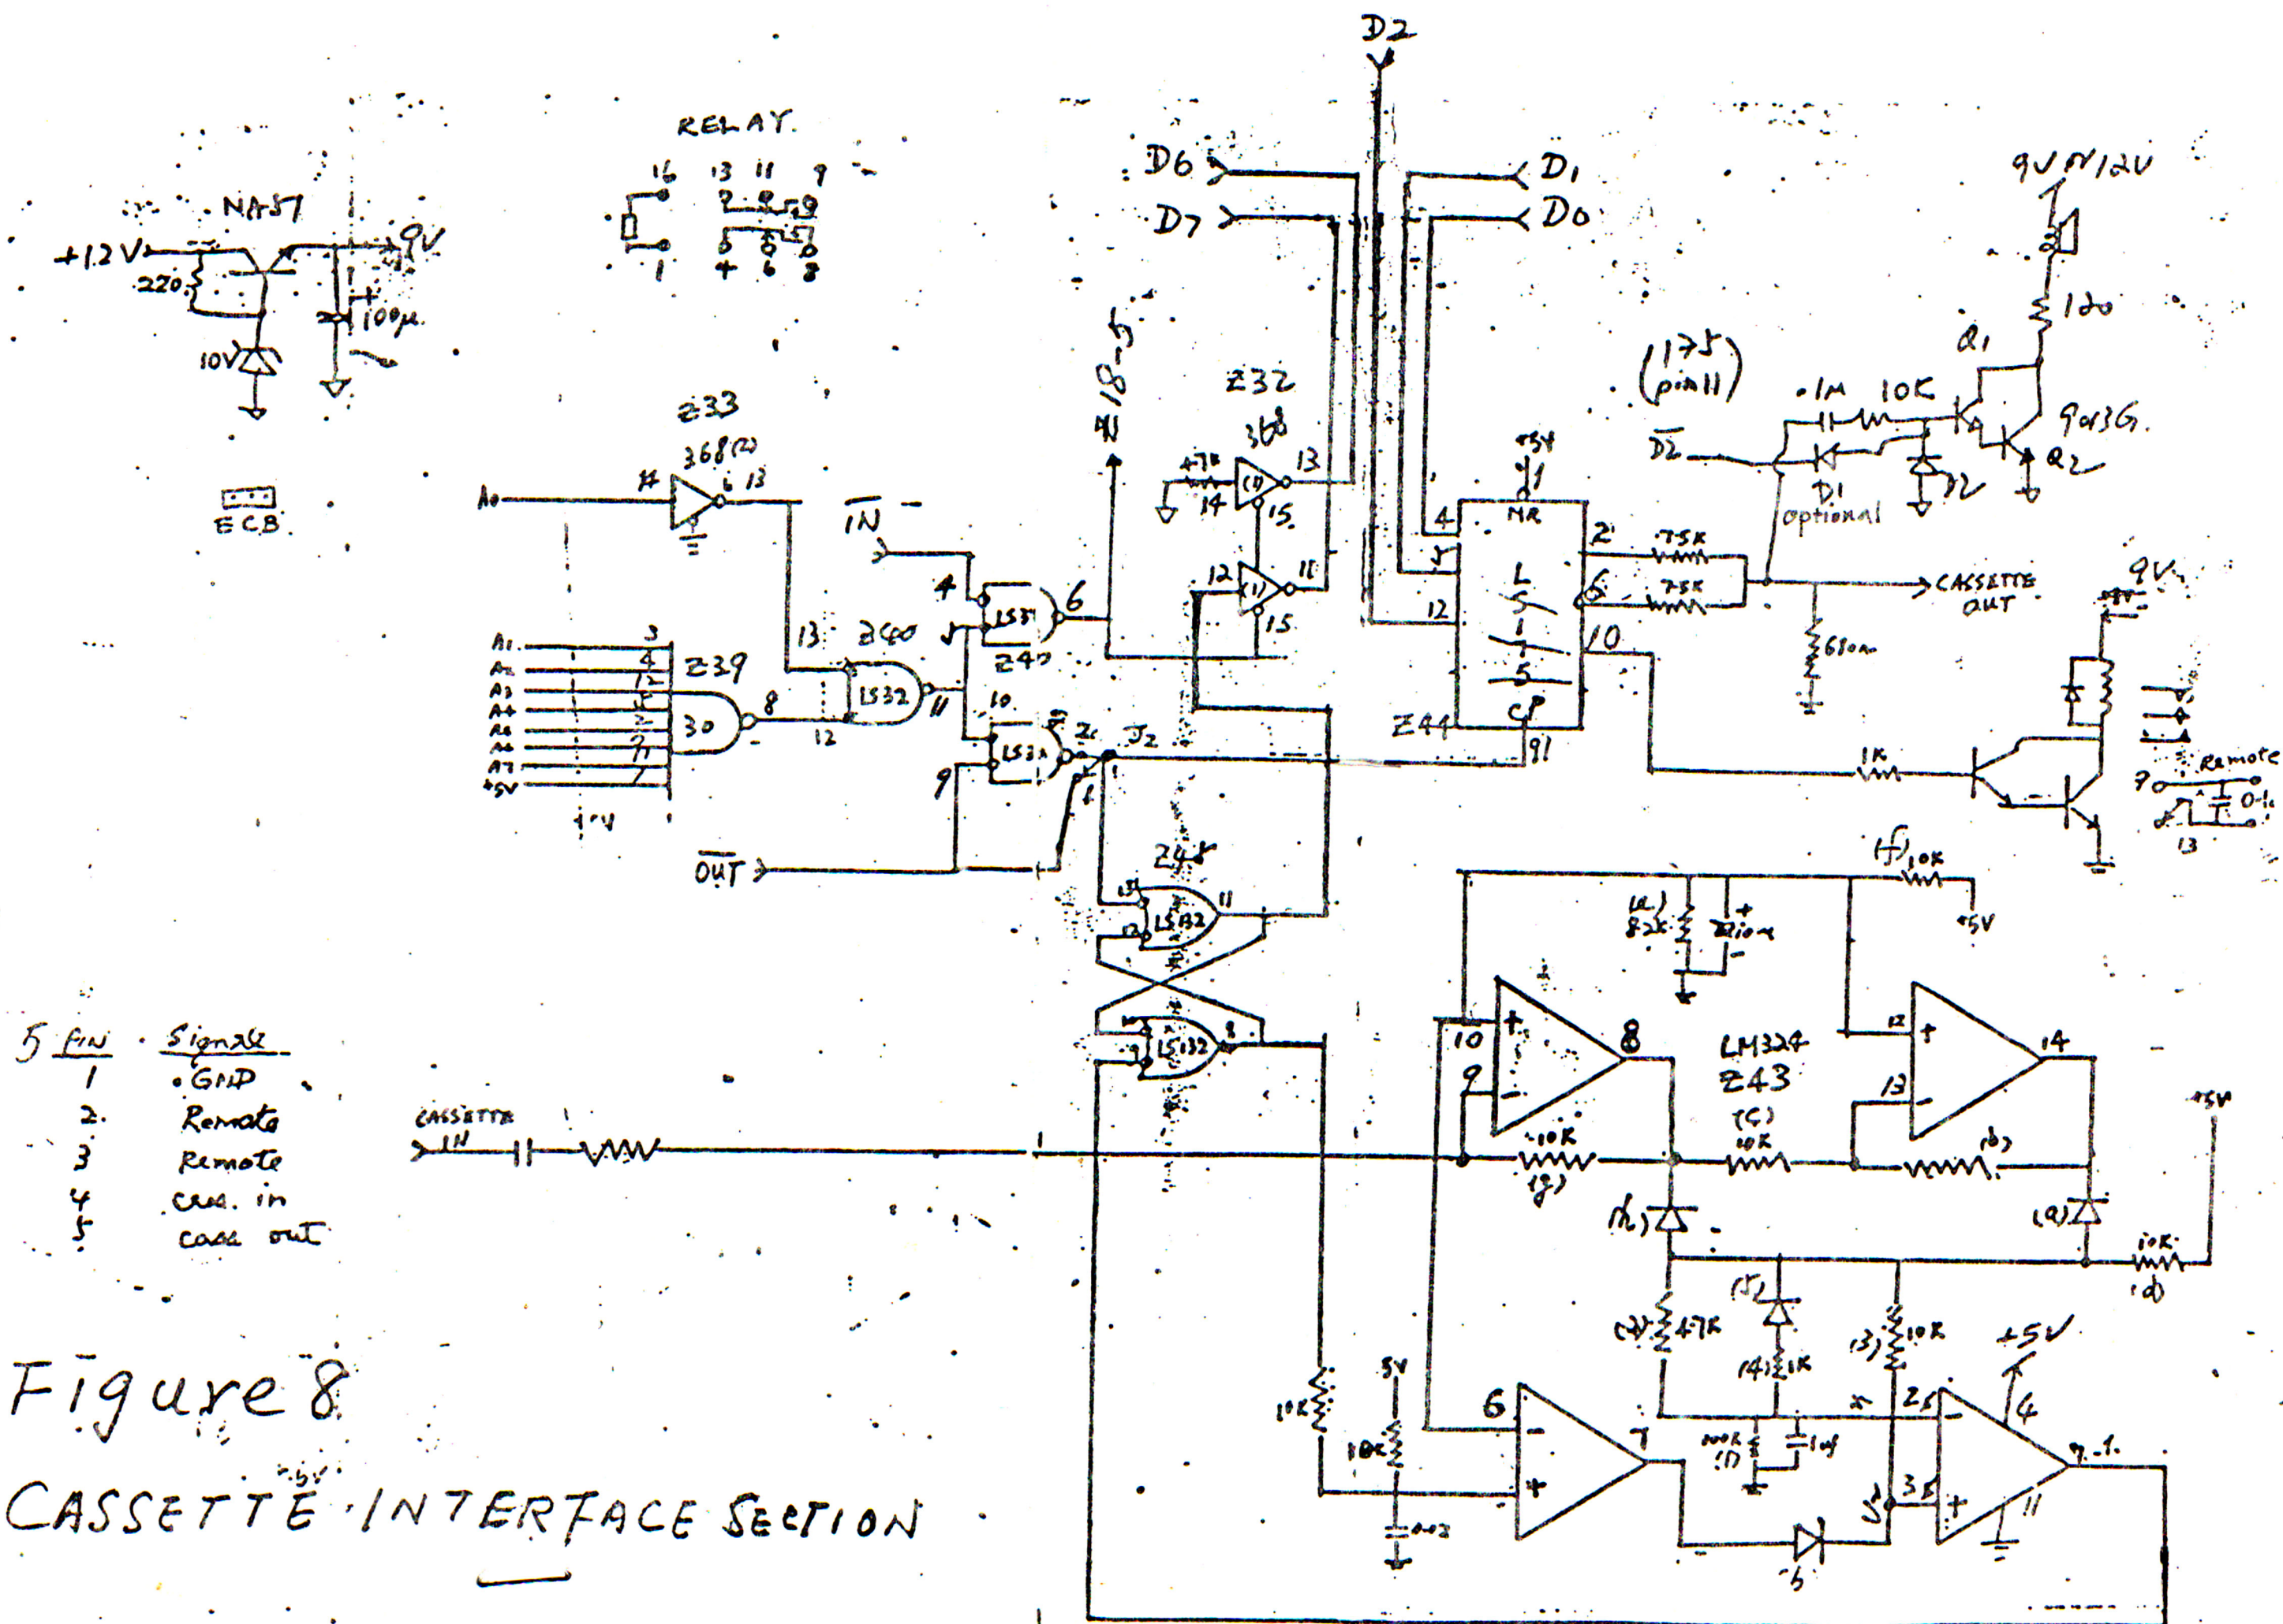


Figure 8
CASSETTE INTERFACE SECTION

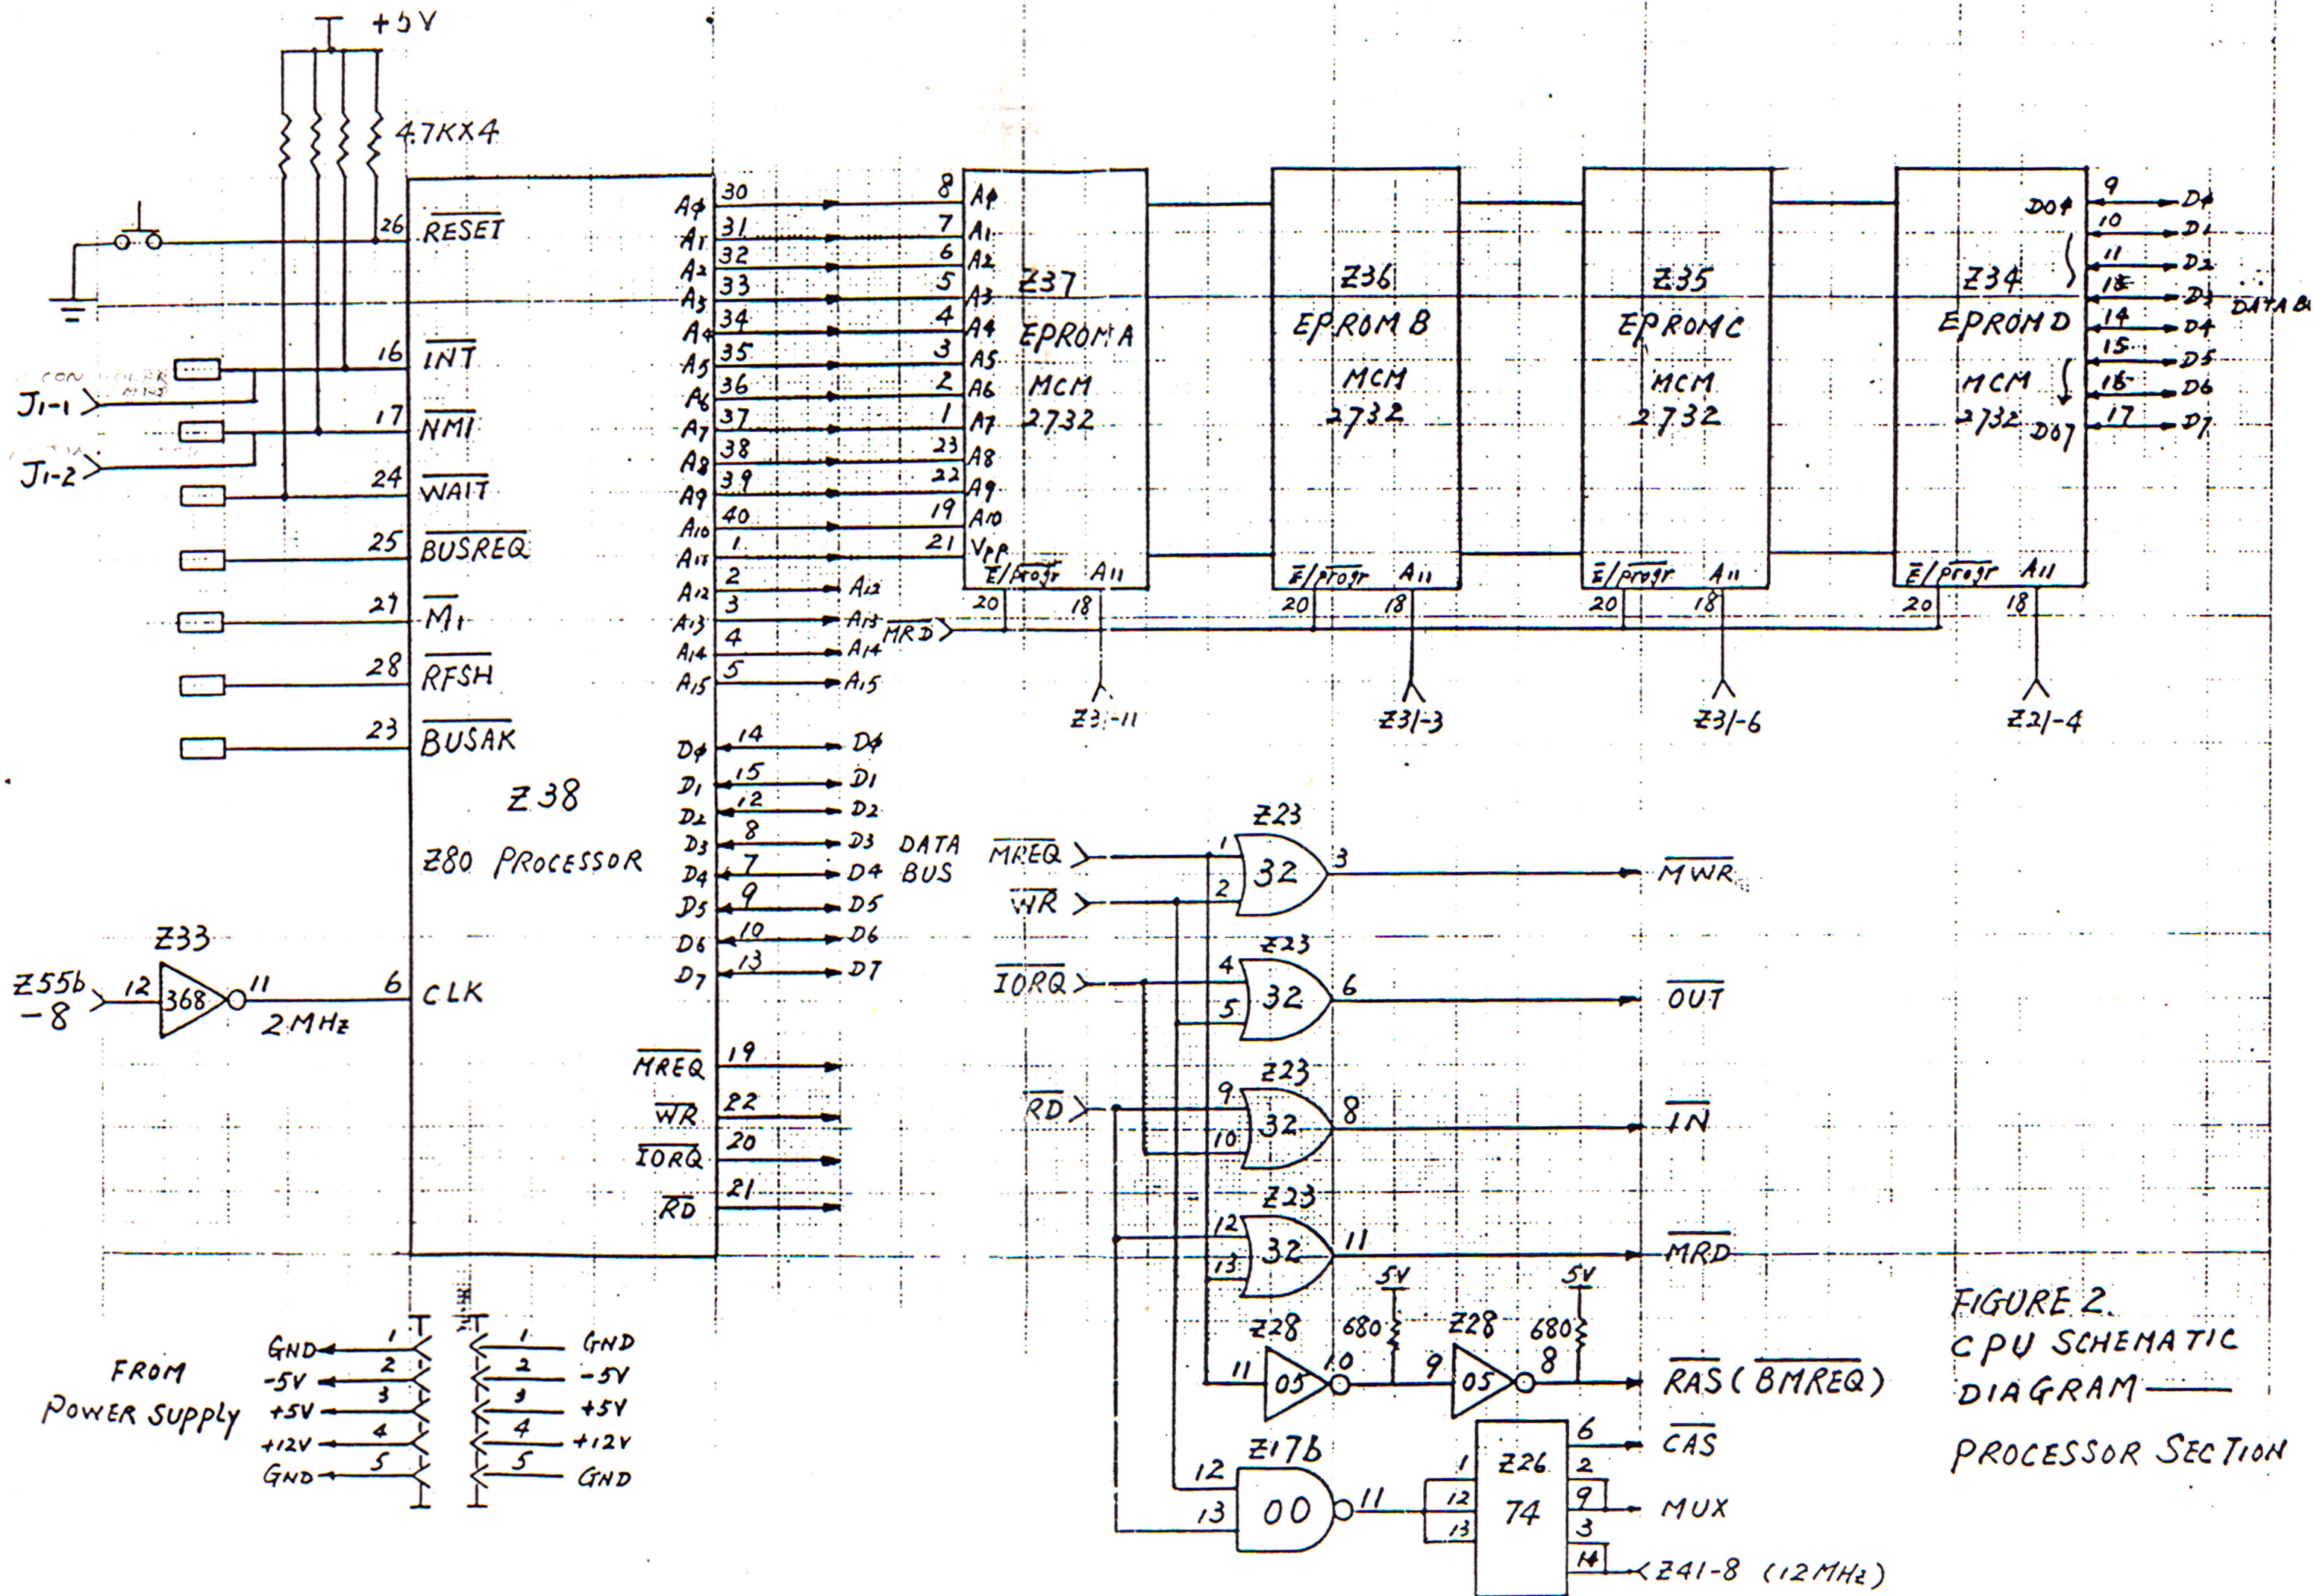


FIGURE 2.
CPU SCHEMATIC
DIAGRAM
PROCESSOR SECTION



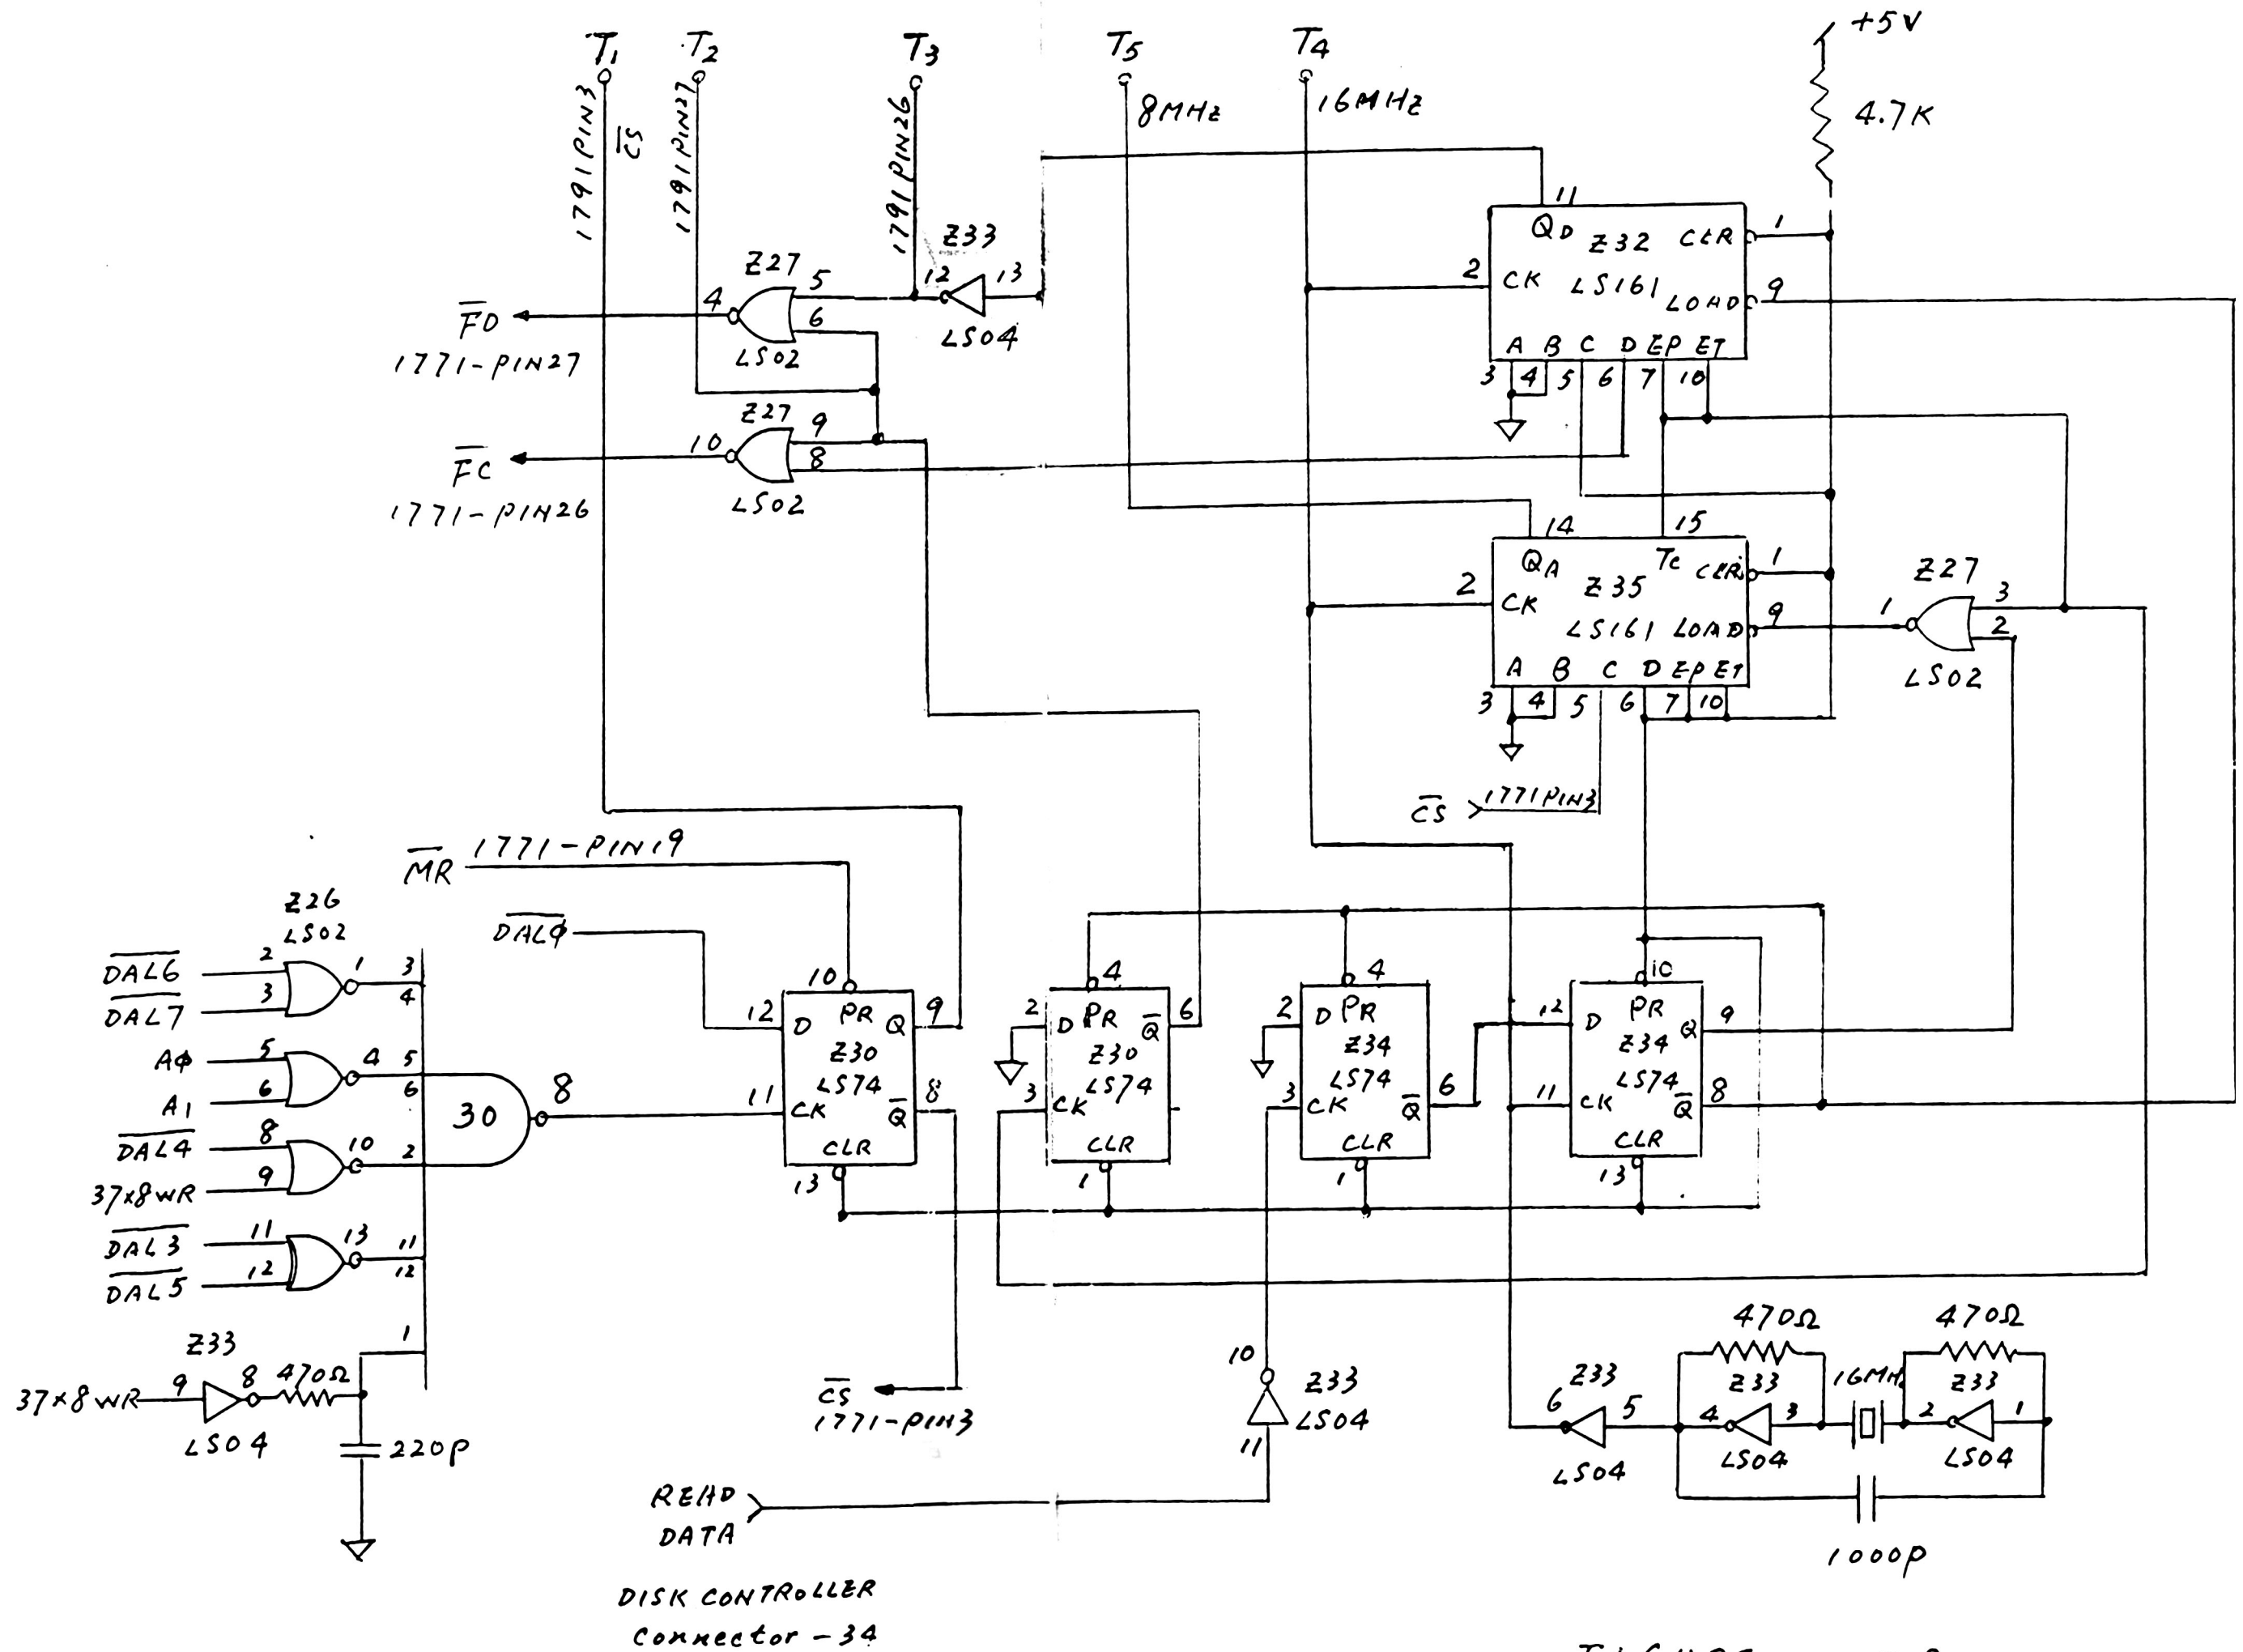


FIGURE 1 OF 2 —
DATA SEPARATOR

DATA SEPARATOR

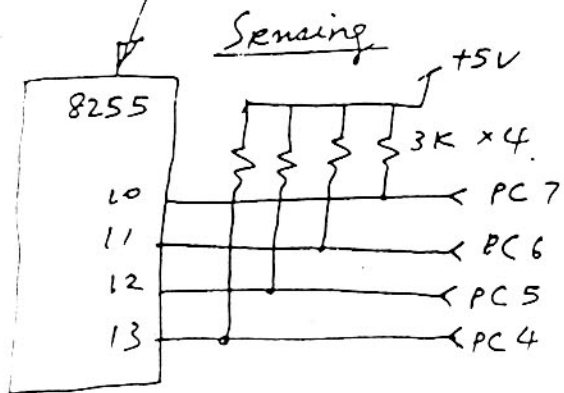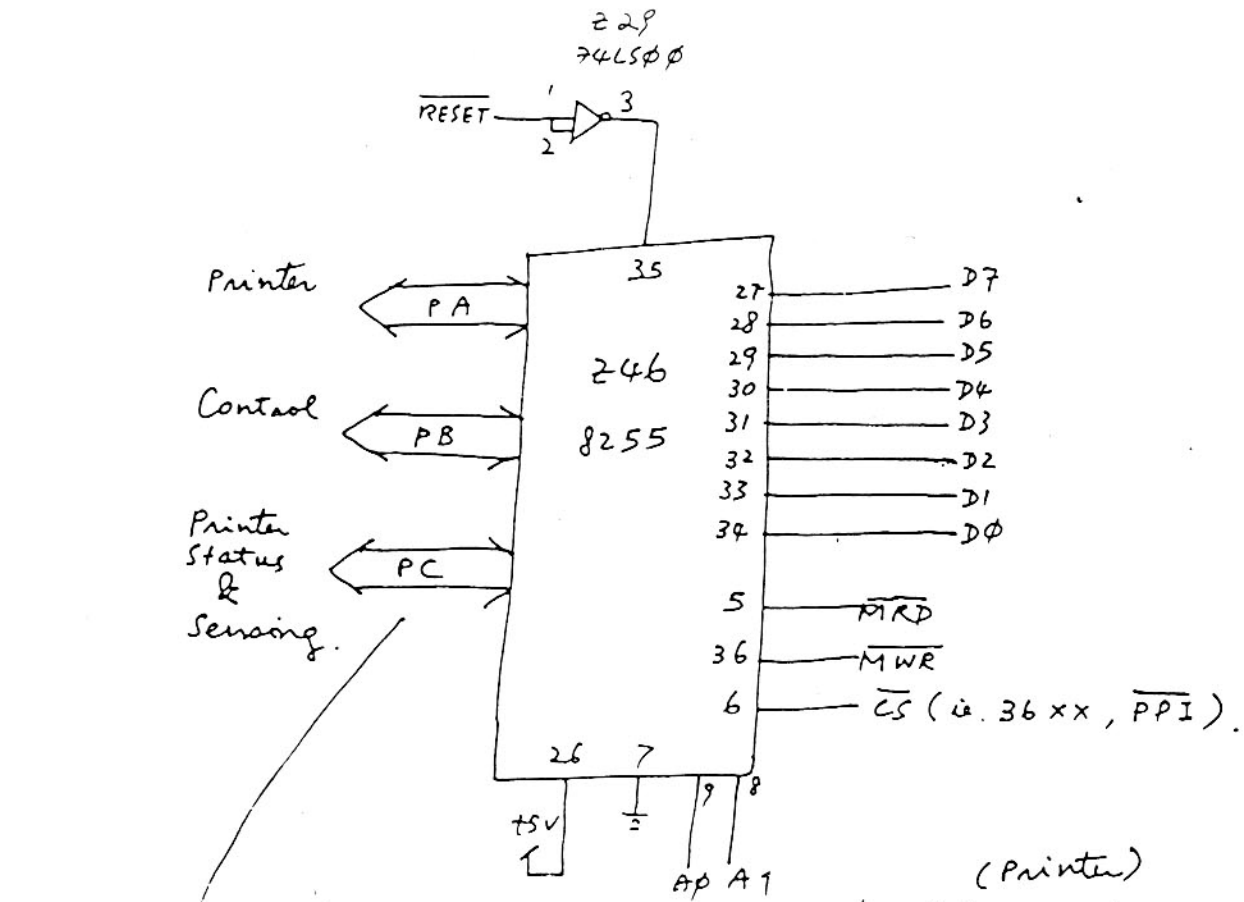

(Printer)

PA	PIN
7	37
6	38
5	39
4	40
3	1
2	2
1	3
0	4

(Printer status)

PC	PIN	
3	17	(Unit Select)
2	16	(out of paper)
1	15	(Busy)
0	10	(Data Strobe)

(Control)

PB	PIN
7	25
6	24
5	23
4	22
3	21
2	20
1	19
0	18

(Sensing)

PC	PIN
7	10
6	11
5	12
4	13

FIGURE 9 - Control Function Section


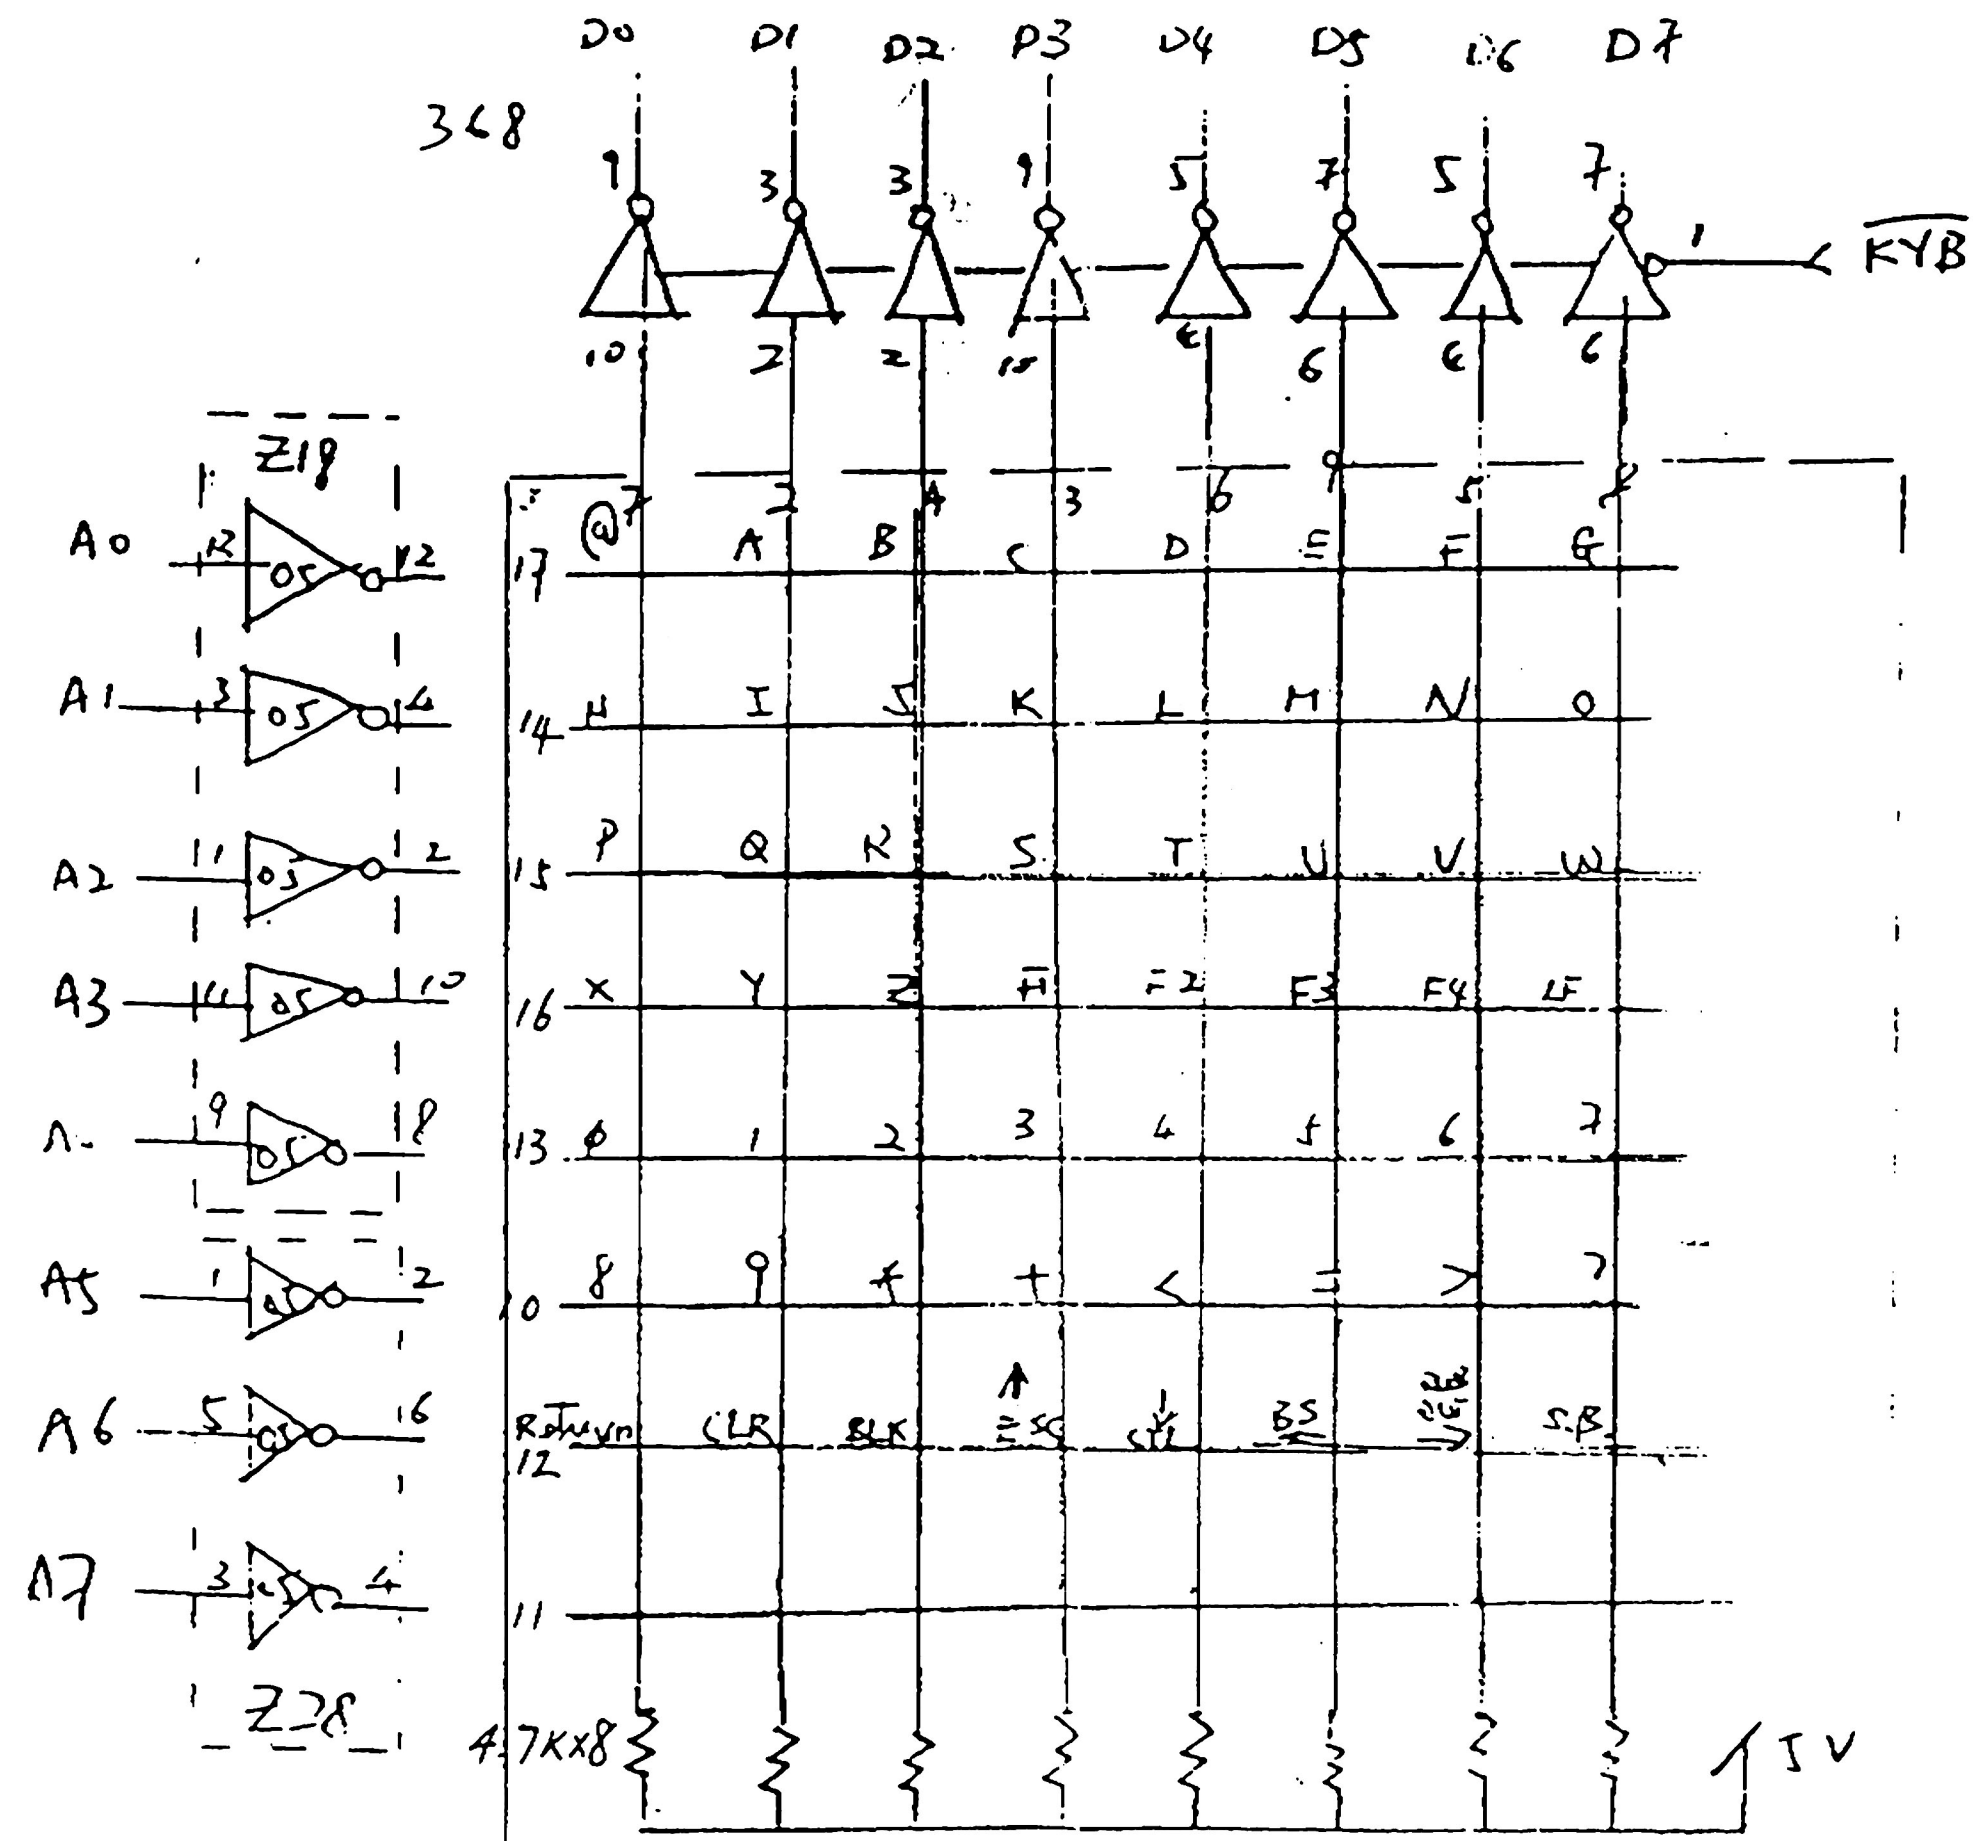


Figure 7

Key Board Section

J₂ 2 M48EN

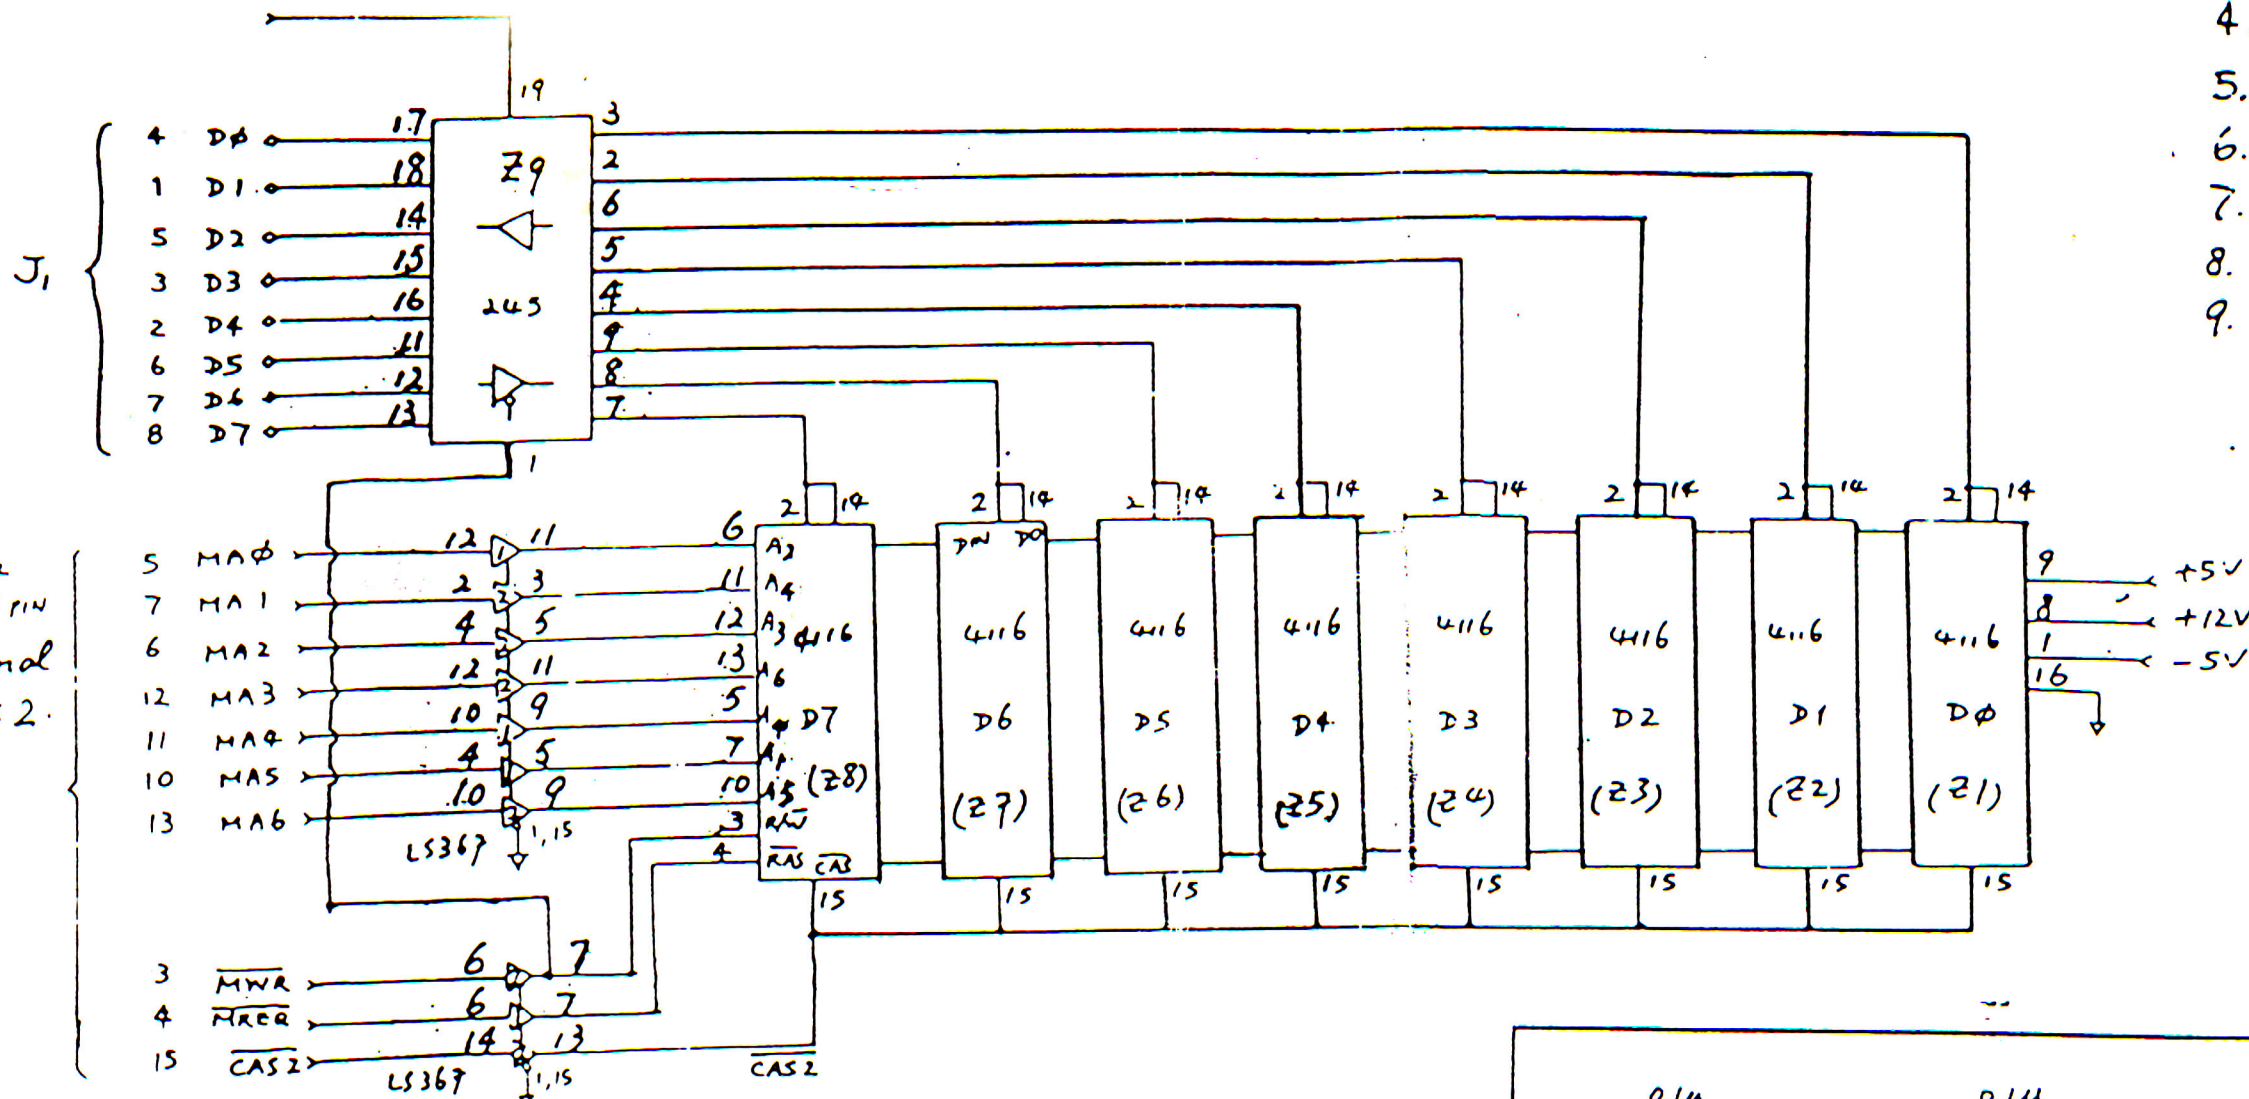


1 - Z11367
2 - Z12367


PARTS:

- | | |
|--------------------------|---------------|
| 1. PCB, KT-1001-06 | x 1 |
| 2. IC Socket, 16 pin. | x 8 |
| 3. 74LS245 | x 1 |
| 4. 74LS367 | x 2 |
| 5. 4116 | x 8 |
| 6. Terminal strip, 8 pin | x 2 |
| 7. Terminal strip, 4 pin | x 2 |
| 8. Cap. 10μF 16V | x 5 |
| 9. 0.1μF Cap. 25V | x 15 (approx) |

J₂
8 pin
Terminal
strip x 2.

FIGURE 10 16K RAM CARD SCHEMATIC DIAGRAM

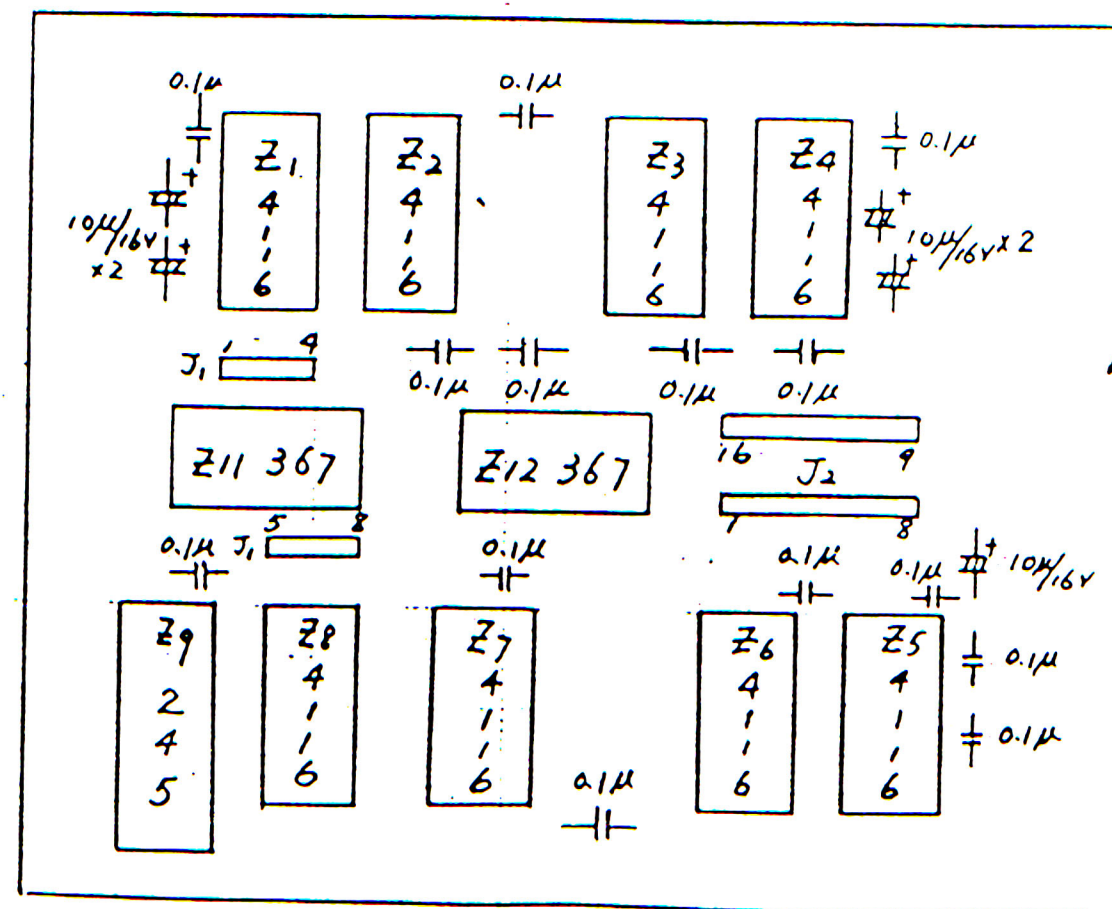

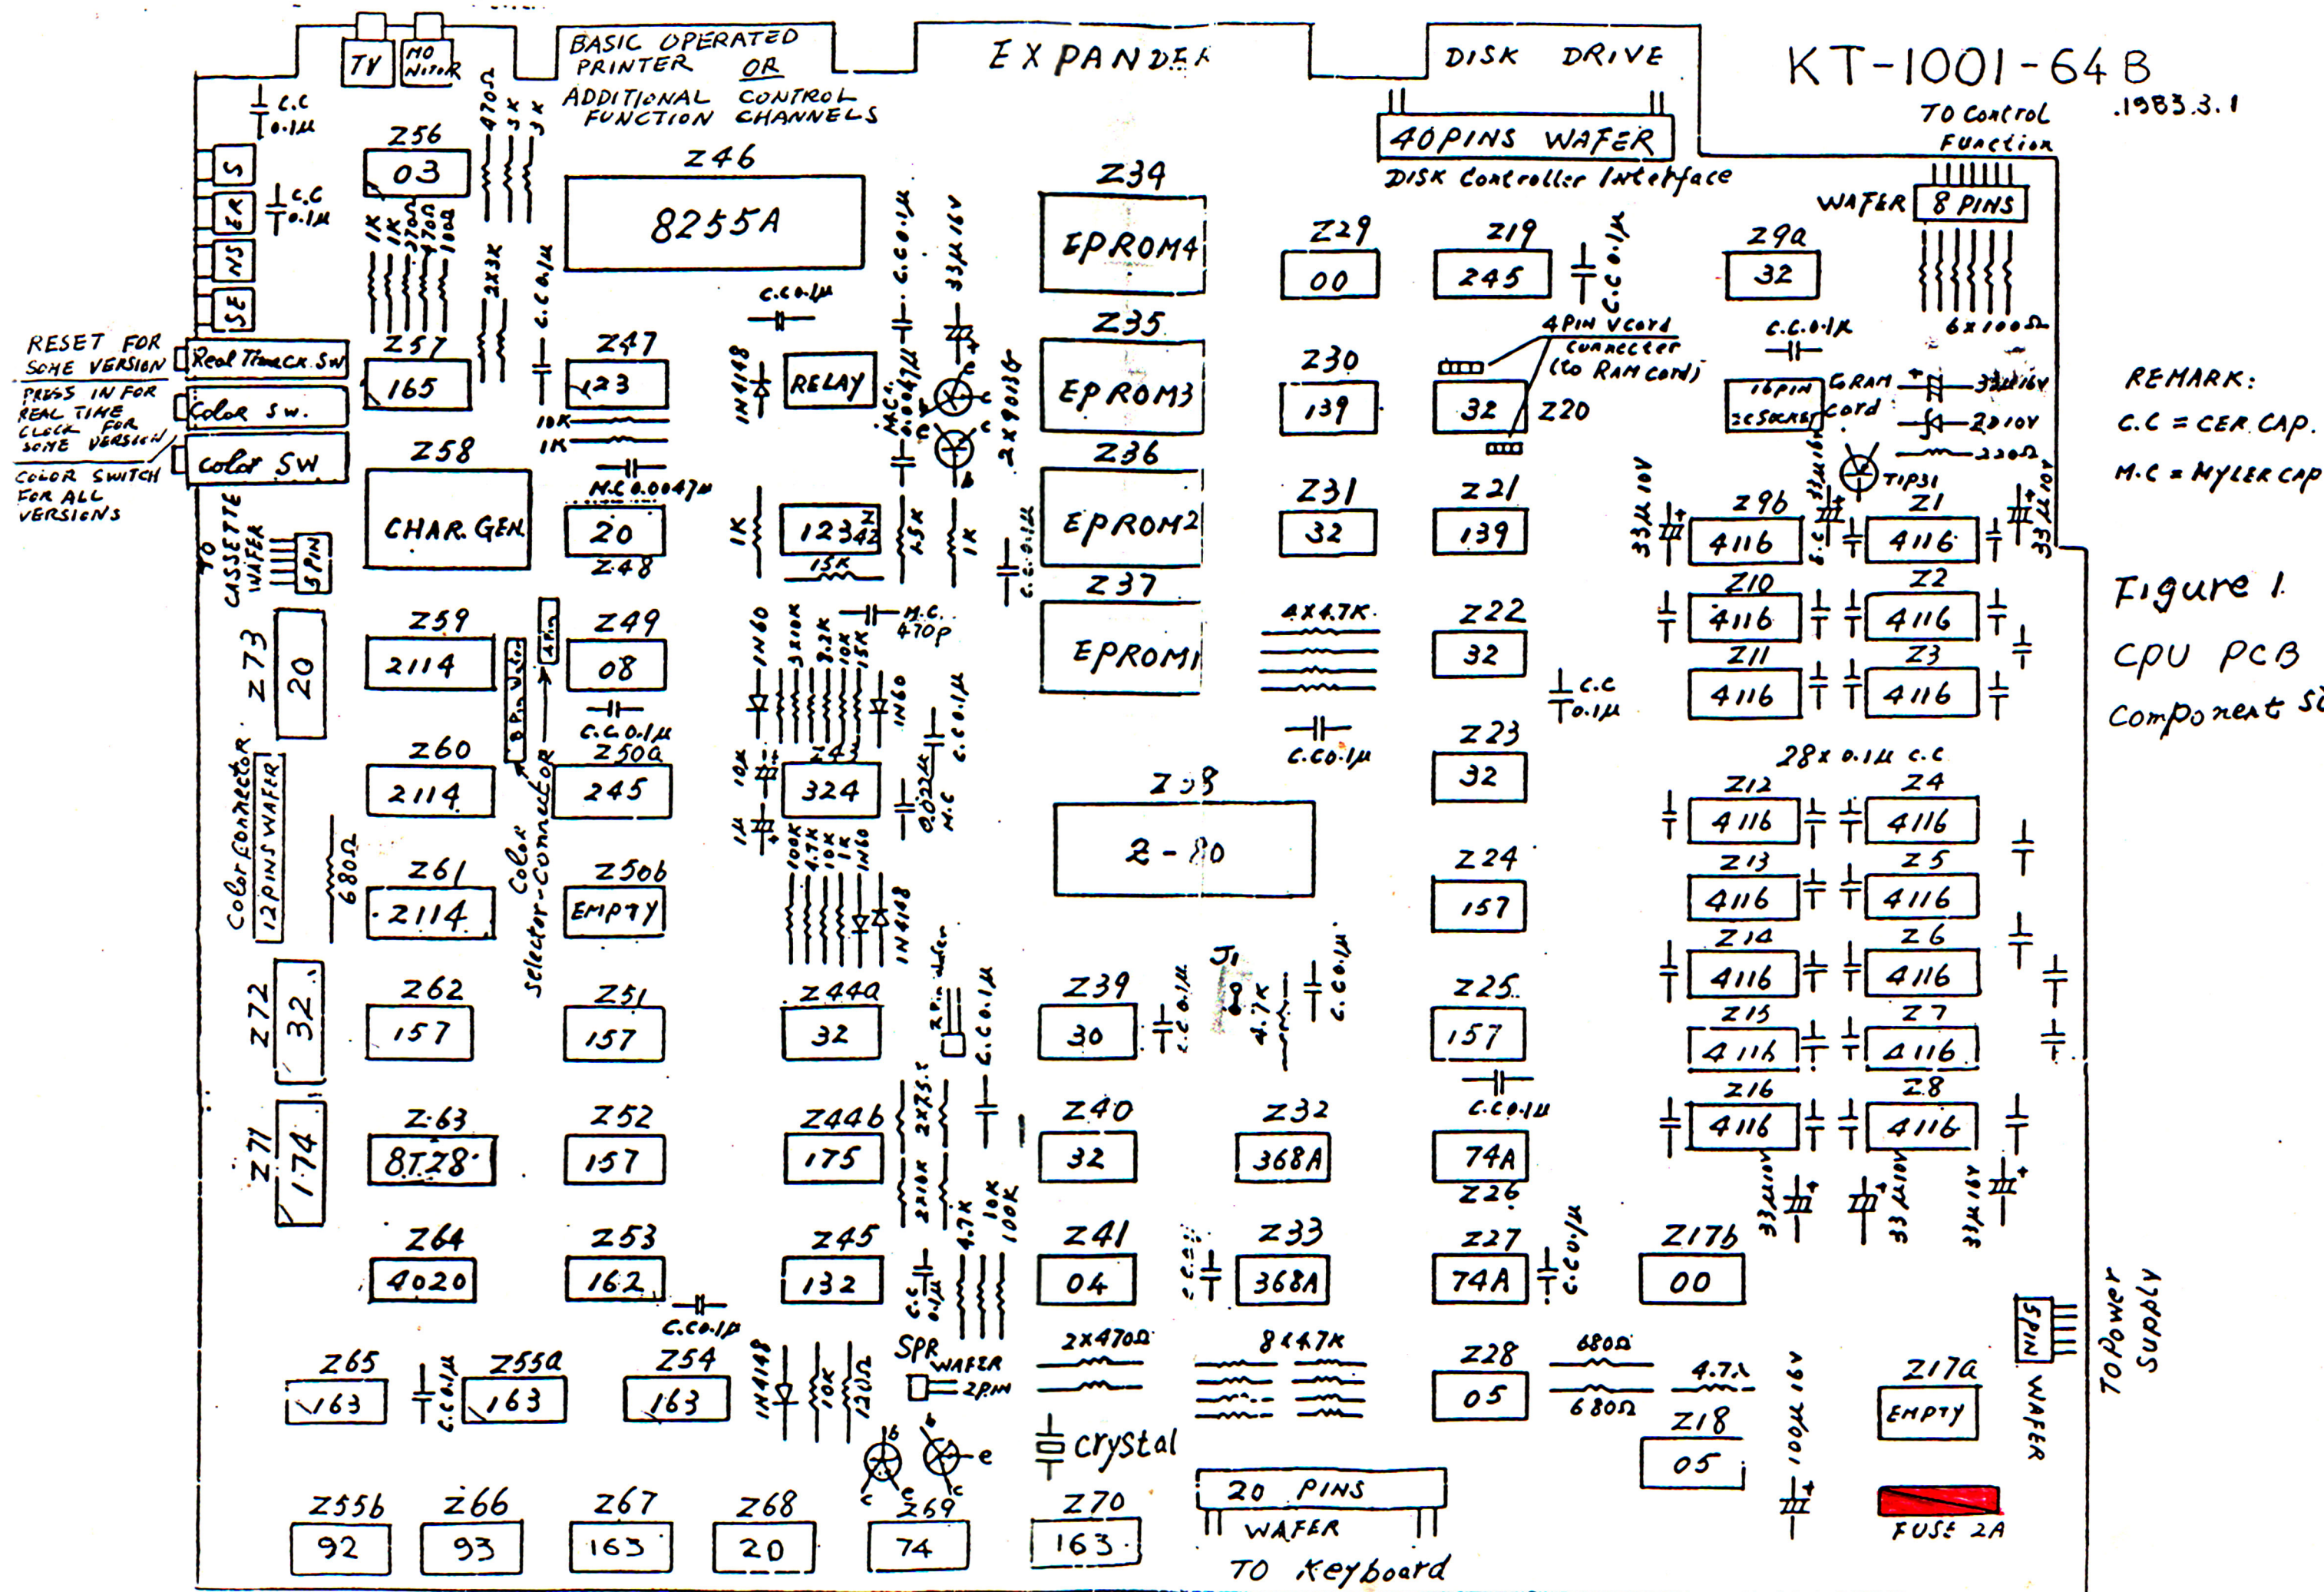

ON MAIN Board

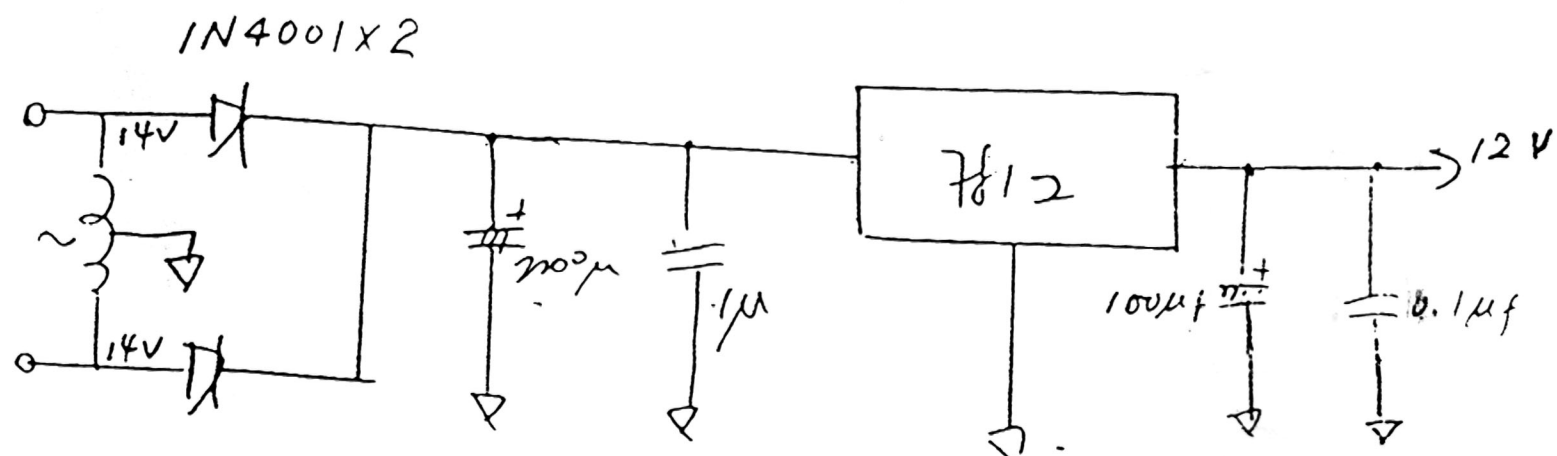
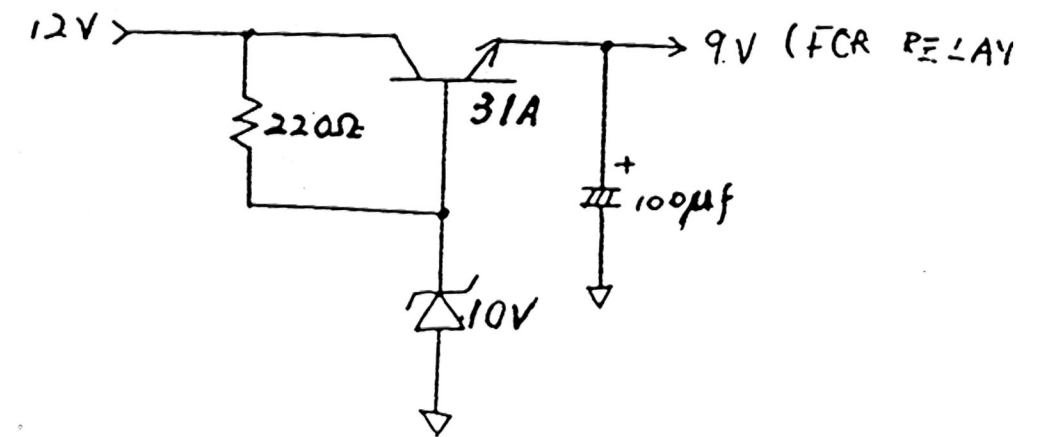


FIGURE 14 Power Supply Schematic Diagram



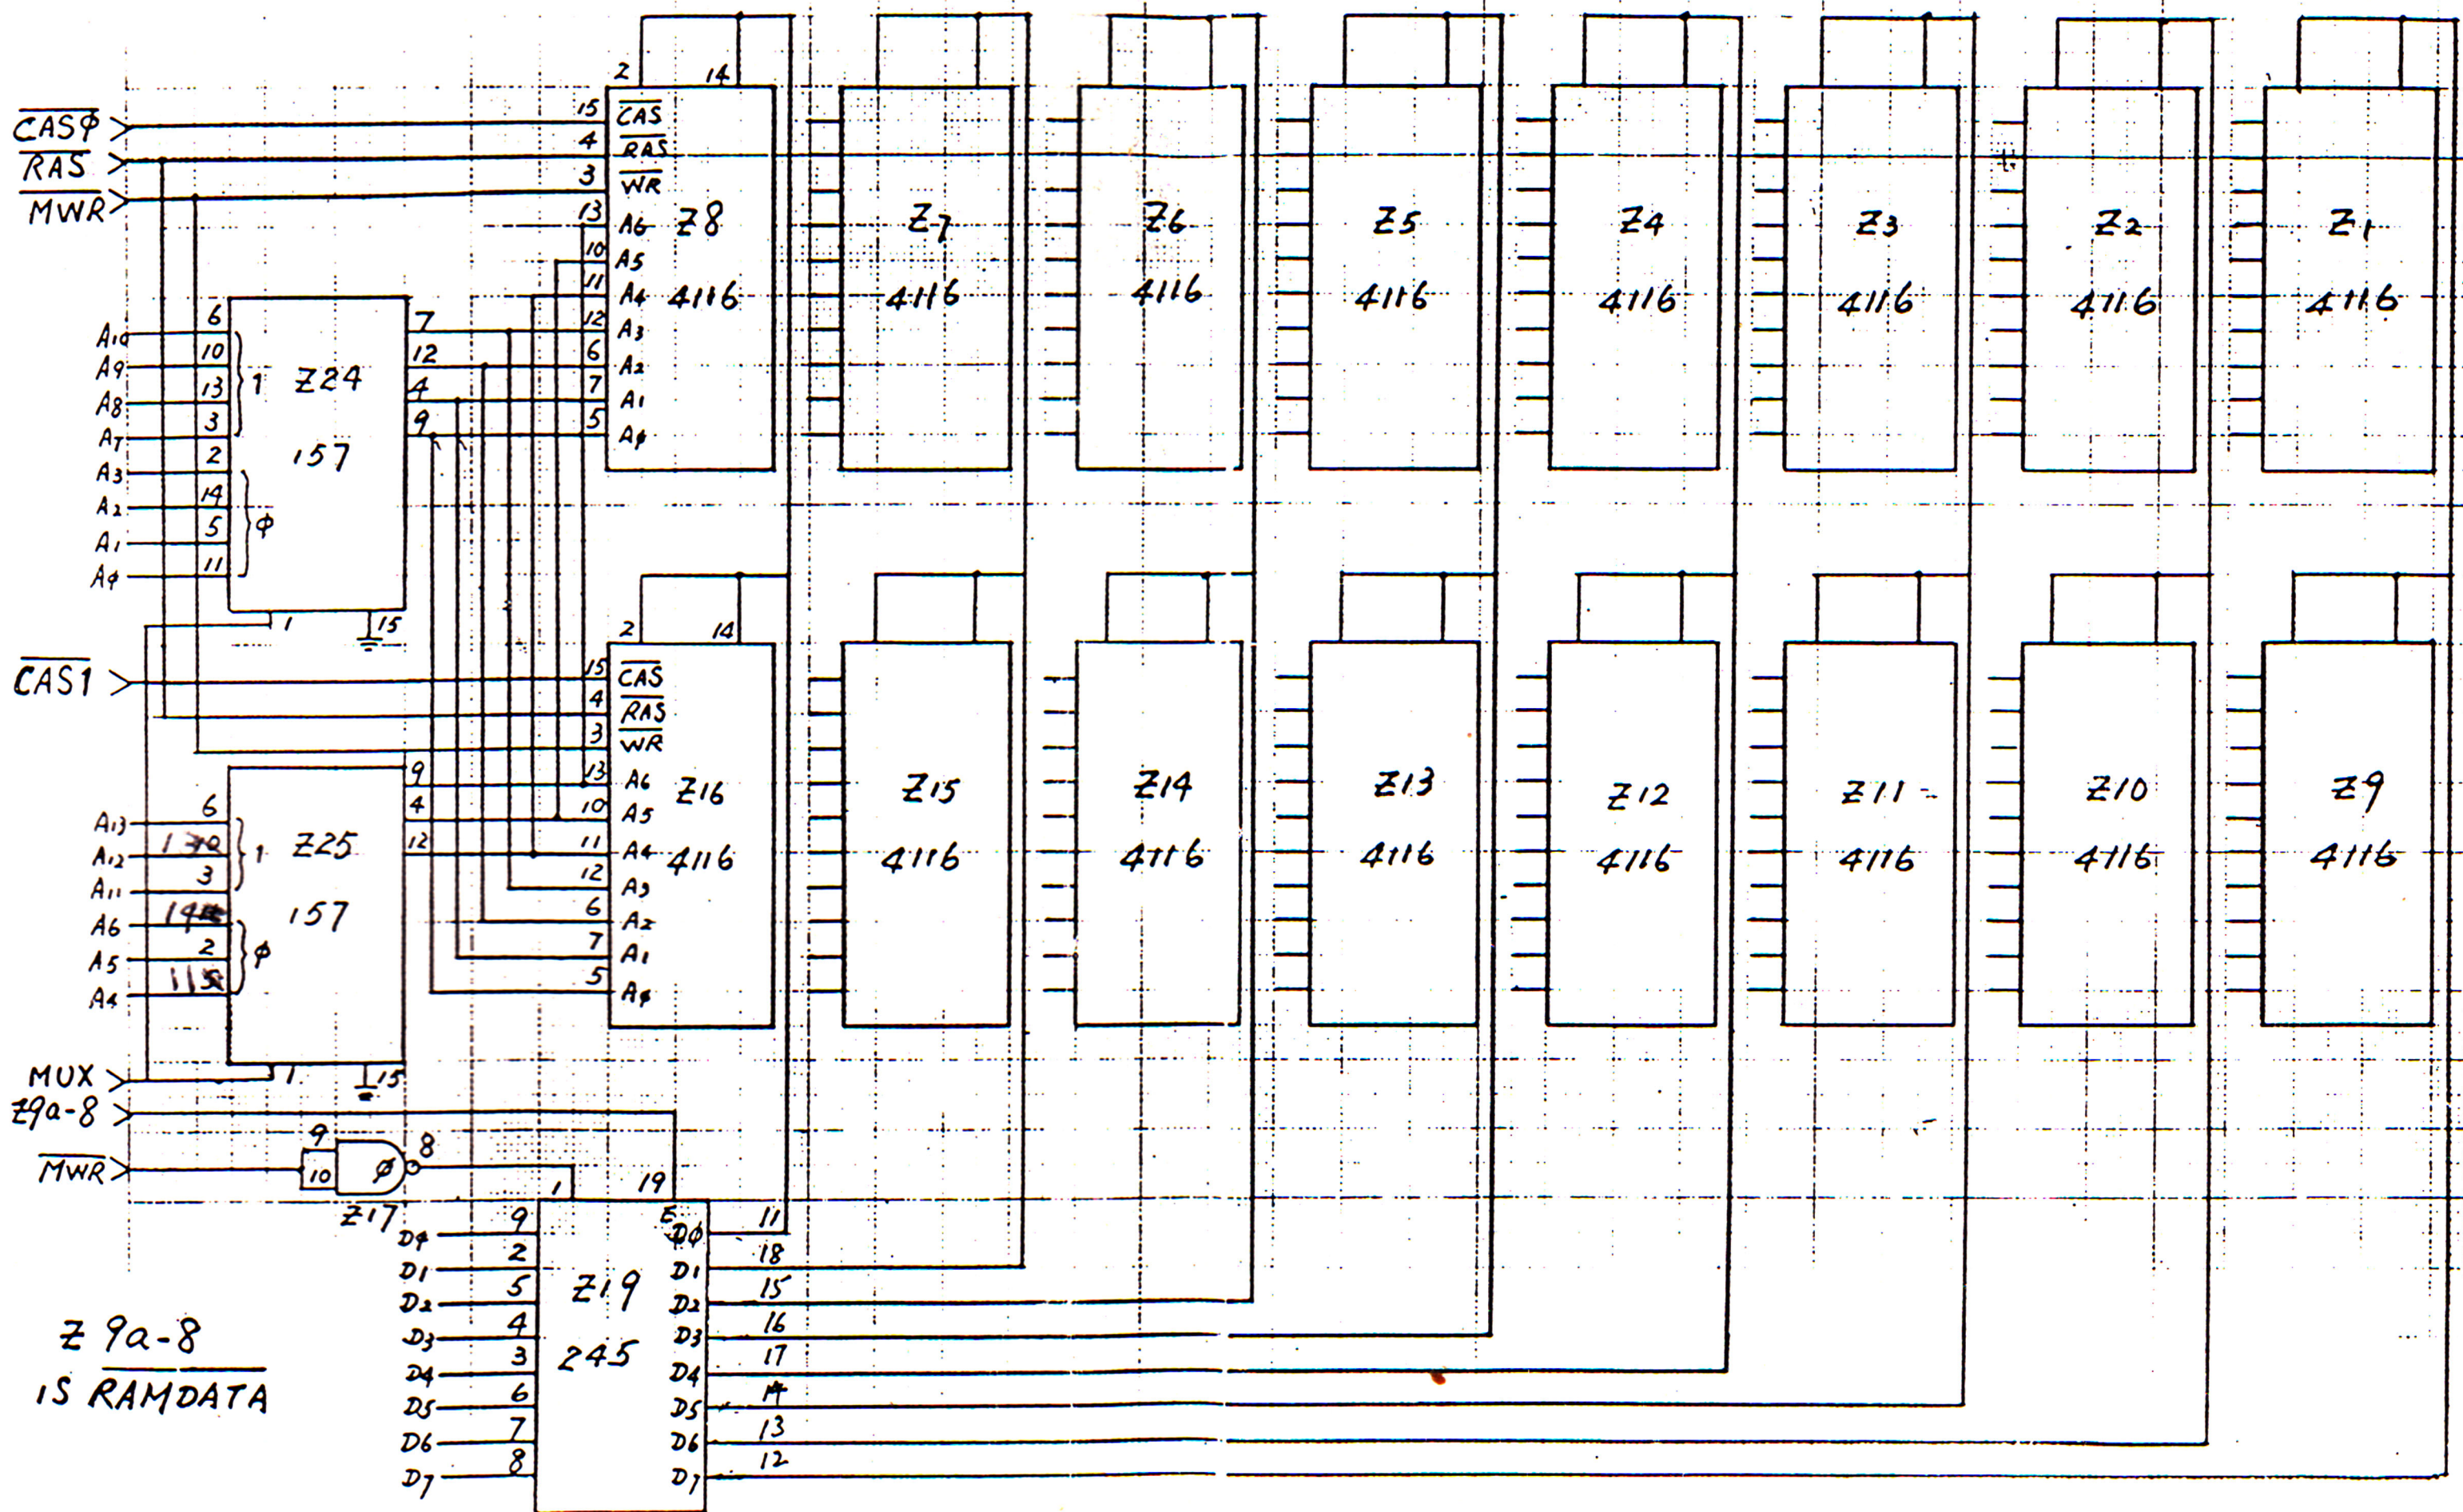


FIGURE 3. CPU SCHEMATIC DIAGRAM — RAM SECTION

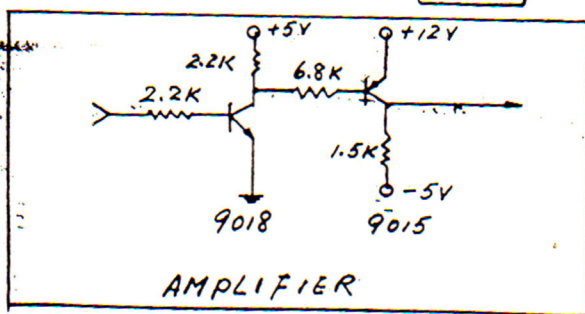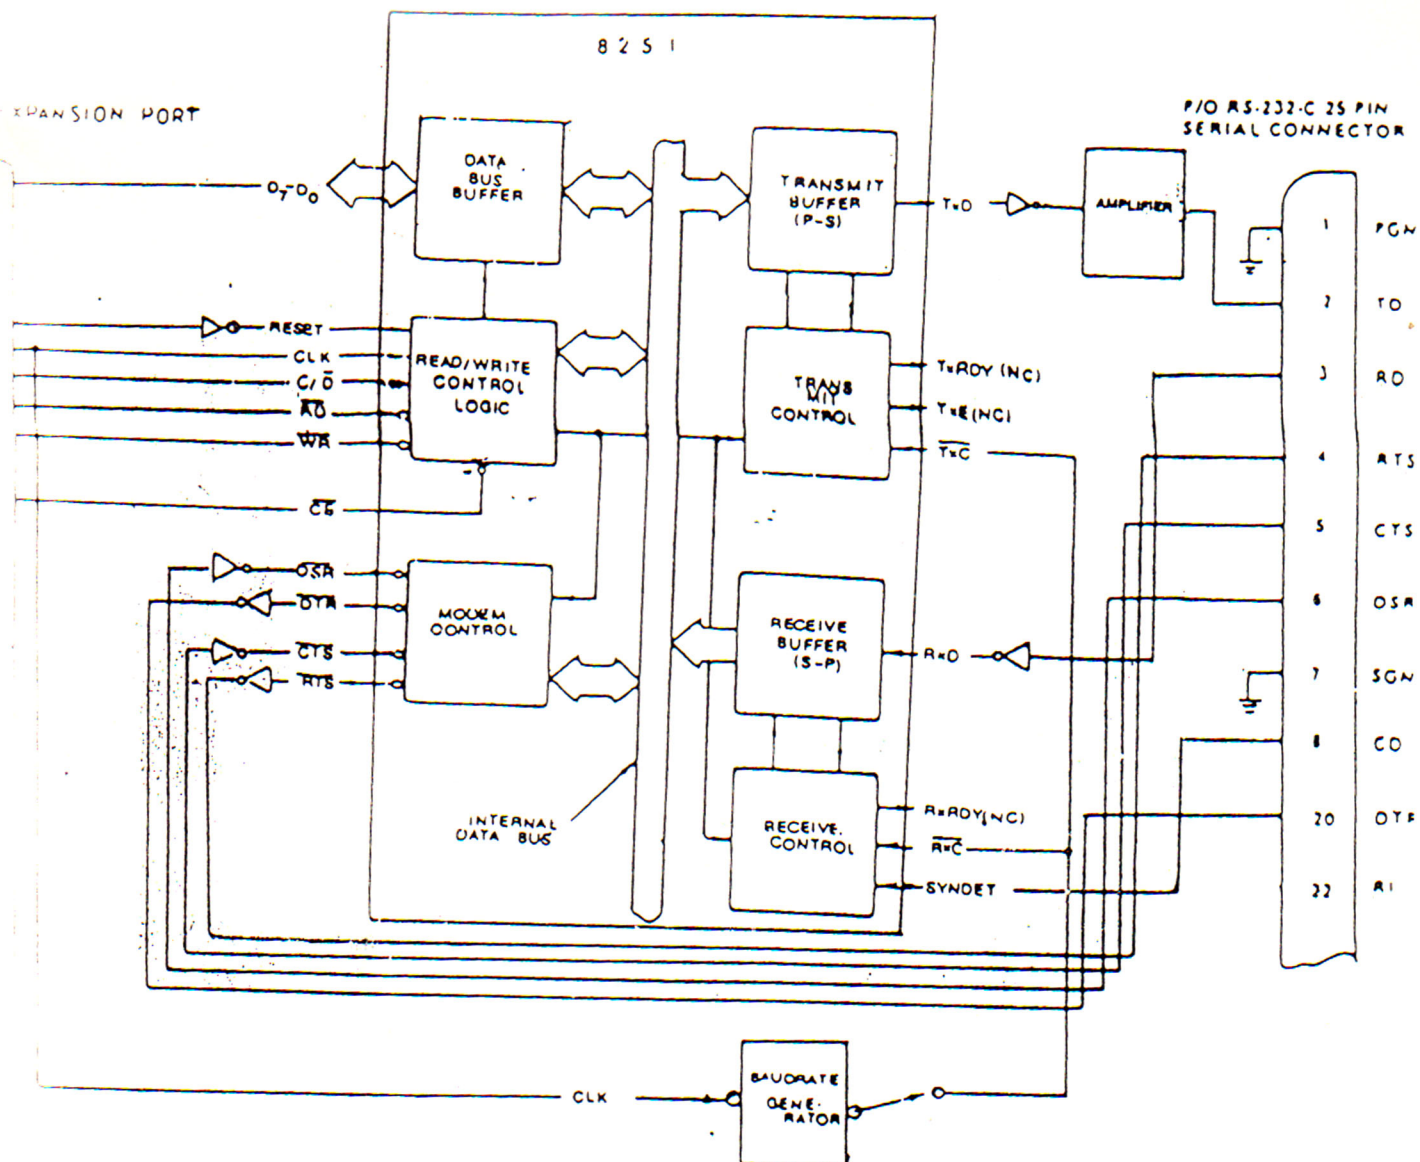

34X1 CONTROL
34X0 DATA

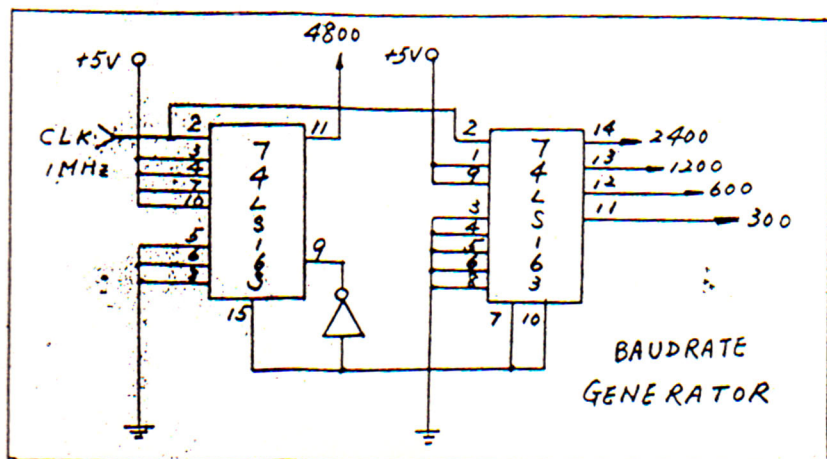


FIGURE 14
RS232 SCHEMATIC
DIAGRAM

DEC. 17. 65

TO: MR. MICHAEL SUSS

TO ADAPT MAIN BOARD OF THE KT-1001-01-64 CI
FOR RS232C OPERATION ONE MUST HAVE THE RIGHT

SIGNAL TO THE EXPANDER PINS:

1. PIN 18 SHOULD NOW BE 12V
2. PIN 23 SHOULD NOW BE 1 MHZ
3. PIN 31 SHOULD NOW BE -5V
4. PIN 49 SHOULD HAVE NO CONNECTIONS
5. PIN 50 SHOULD BE CHANGED FROM GROUND TO INVERTED CS


TO DO THIS U CAN DO THE FOLLOWING:

1. PIN 17 N PIN 18 ARE CONNECTED BY A PLATE THROUGH HOLE. TO DISCONNECTED THEM DRILL CAREFULLY WITH A 0.9 MM OR 1.0MM DRILL. TEST WITH METER. PUT A LITTLE JUMPER WIRE OR RUN SOLDER TO ACT AS A BRIDGE FOR BETTER CONDUCTION FOR PIN 17 BECAUSE THE DRILLING HAS MADE THE CIRCUIT THIN. CONNECT PIN 18 TO 12V POWER SUPPLY MAKING SURE THE SOLDER DOES NOT RUN FURTHER DOWN THE PIN OTHERWISE U CANNOT CONNECT THE FEMALE CONNECTOR OF RS232C ONTO THE EXPANDER PORT.
2. PIN 23 IS FREE, SO JUST CONNECT TO Z64 PIN 10
3. PIN 31 IS FREE, SO JUST CONNECT TO -5V
4. CUT PIN 49 OFF FROM GROUND SO AS TO LEAVE FREE
5. PIN 50 SHOULD BE CHANGED FROM GND BY CUTTING N CONECT TO INVERT CS WHICH IS Z22 PIN 11


THE SHIPMENT YESTERDAY U IS ALREADY CONVERTED FOR RS232C

BEST RGDS,
HEILI LEE#
SAGA AA39040

TELEX MESSAGE TELEX MESSAGE

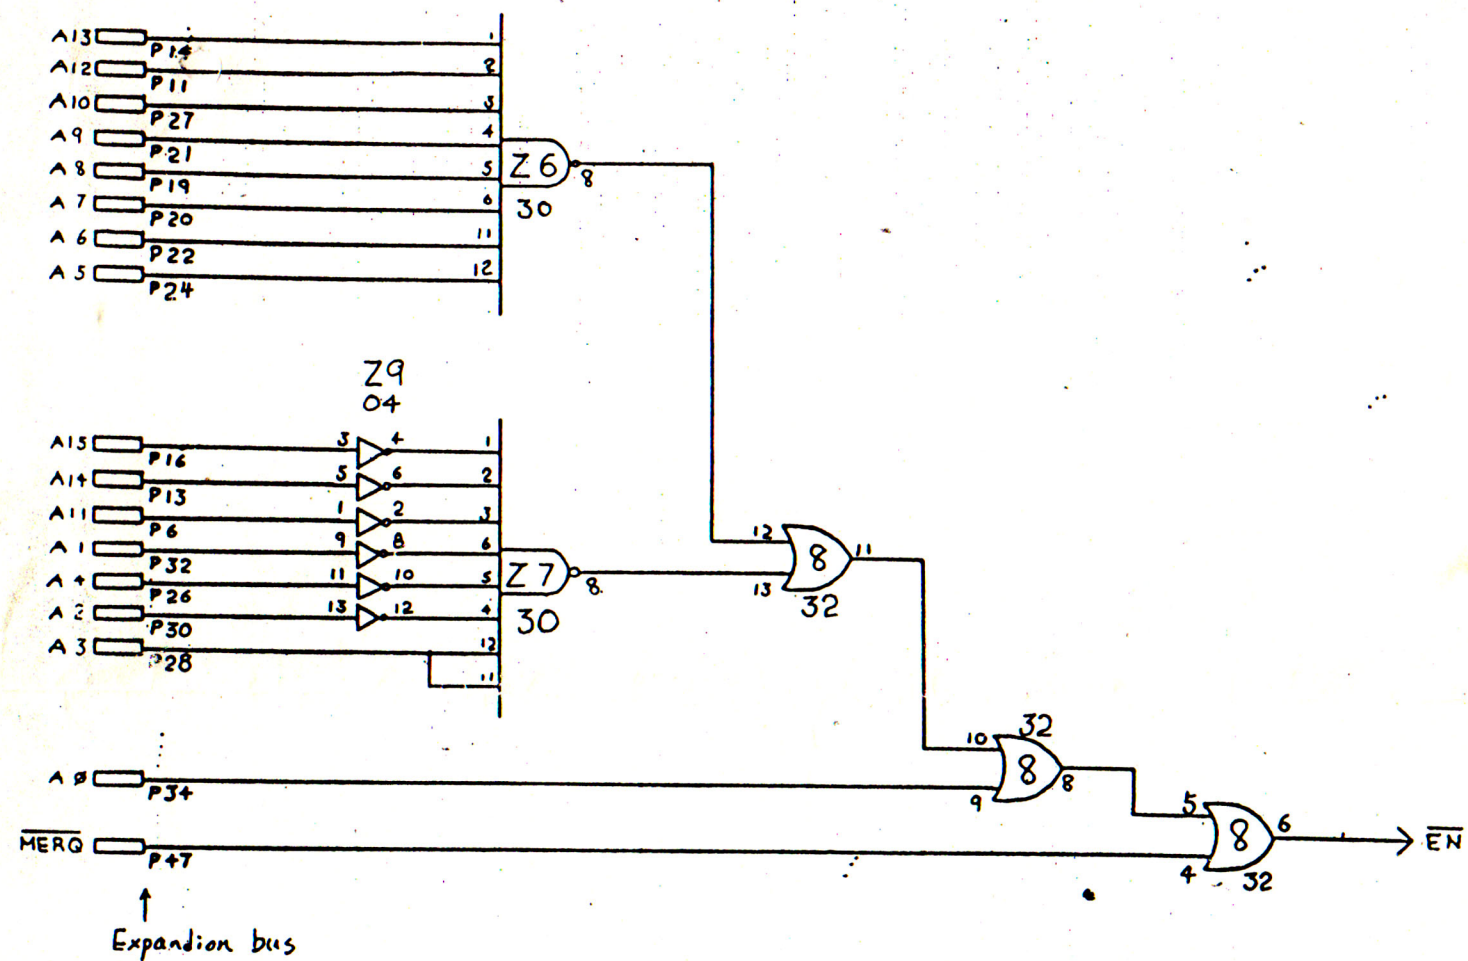

PRINTER INTERFACE

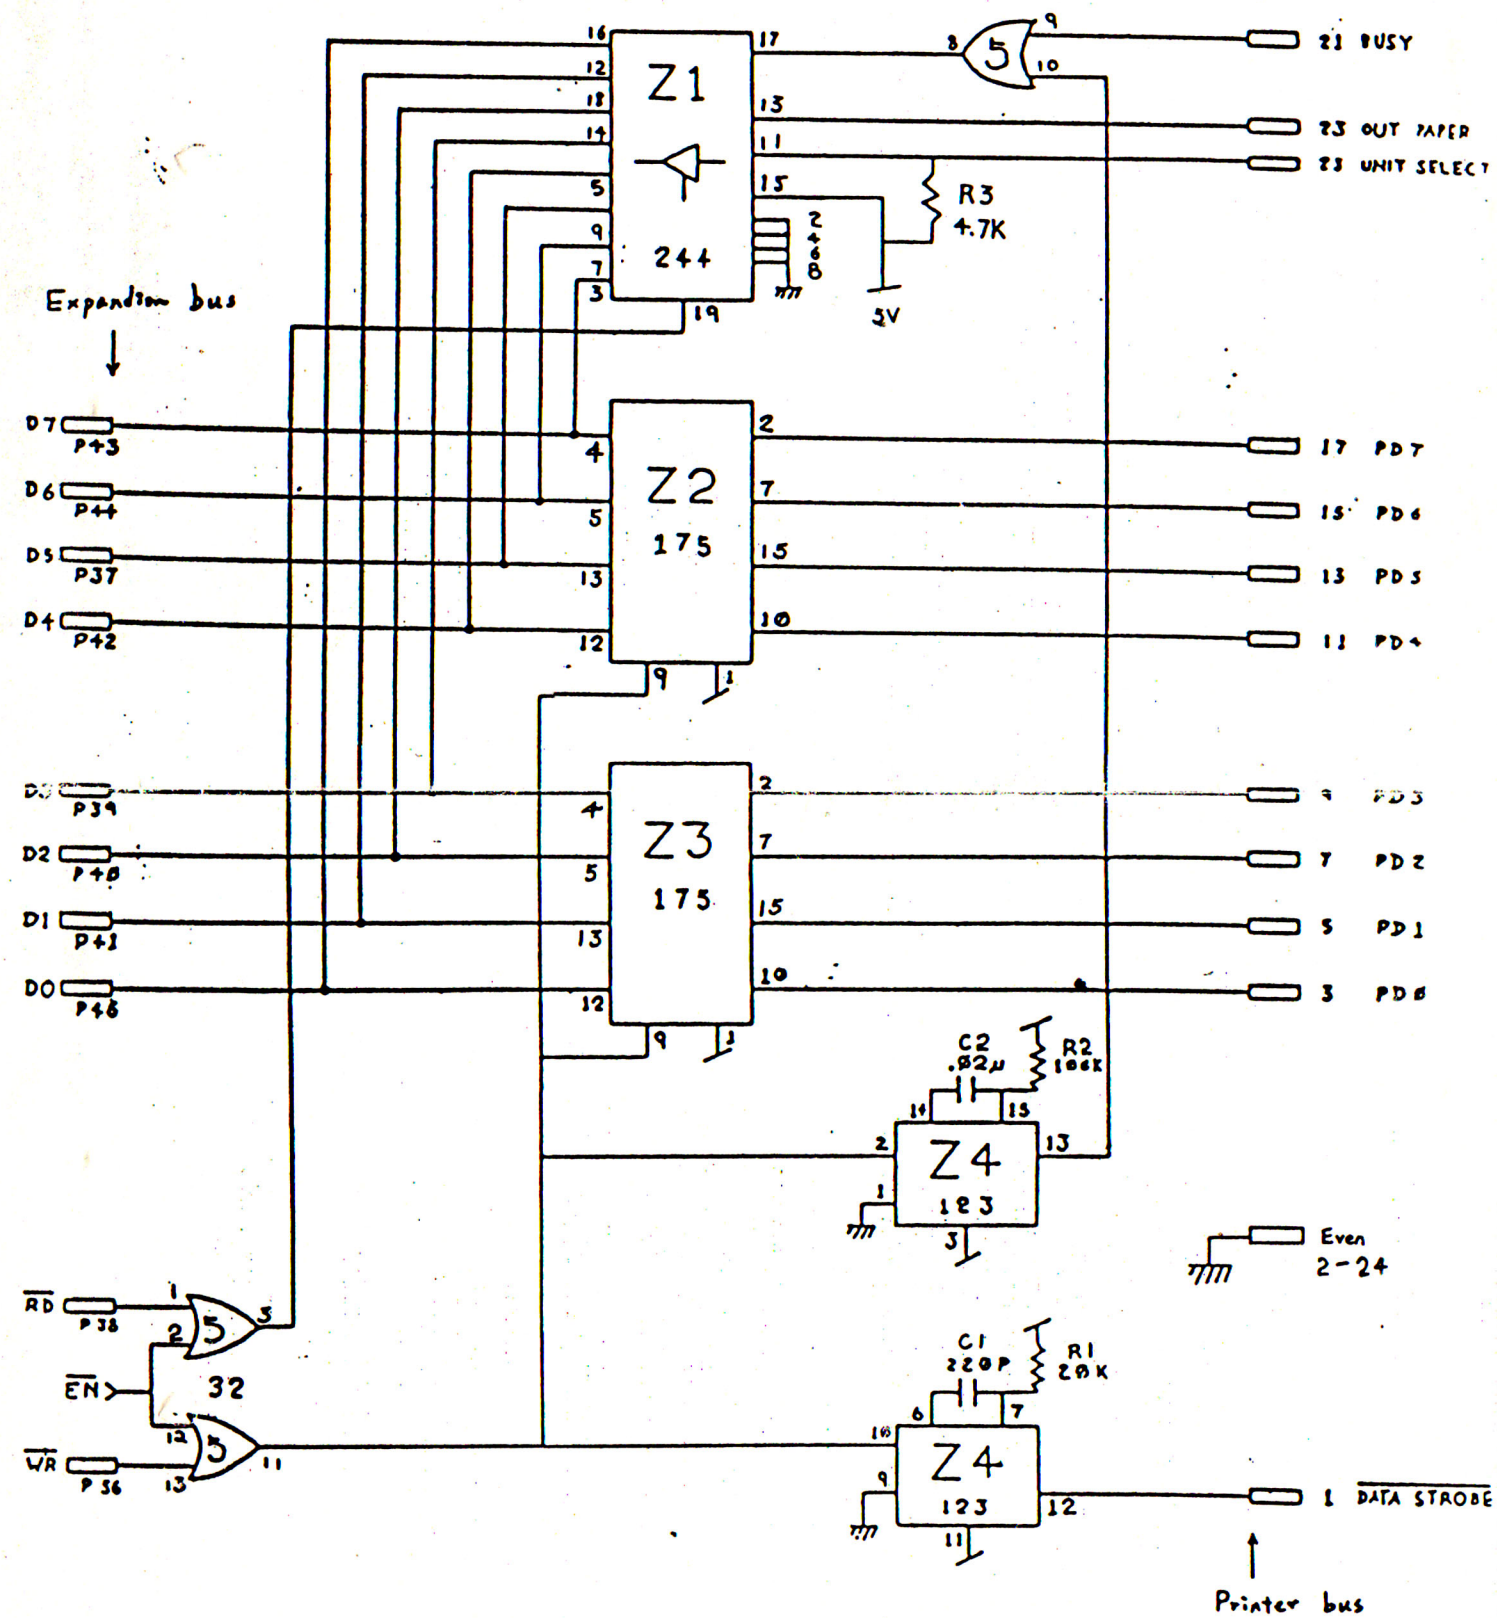

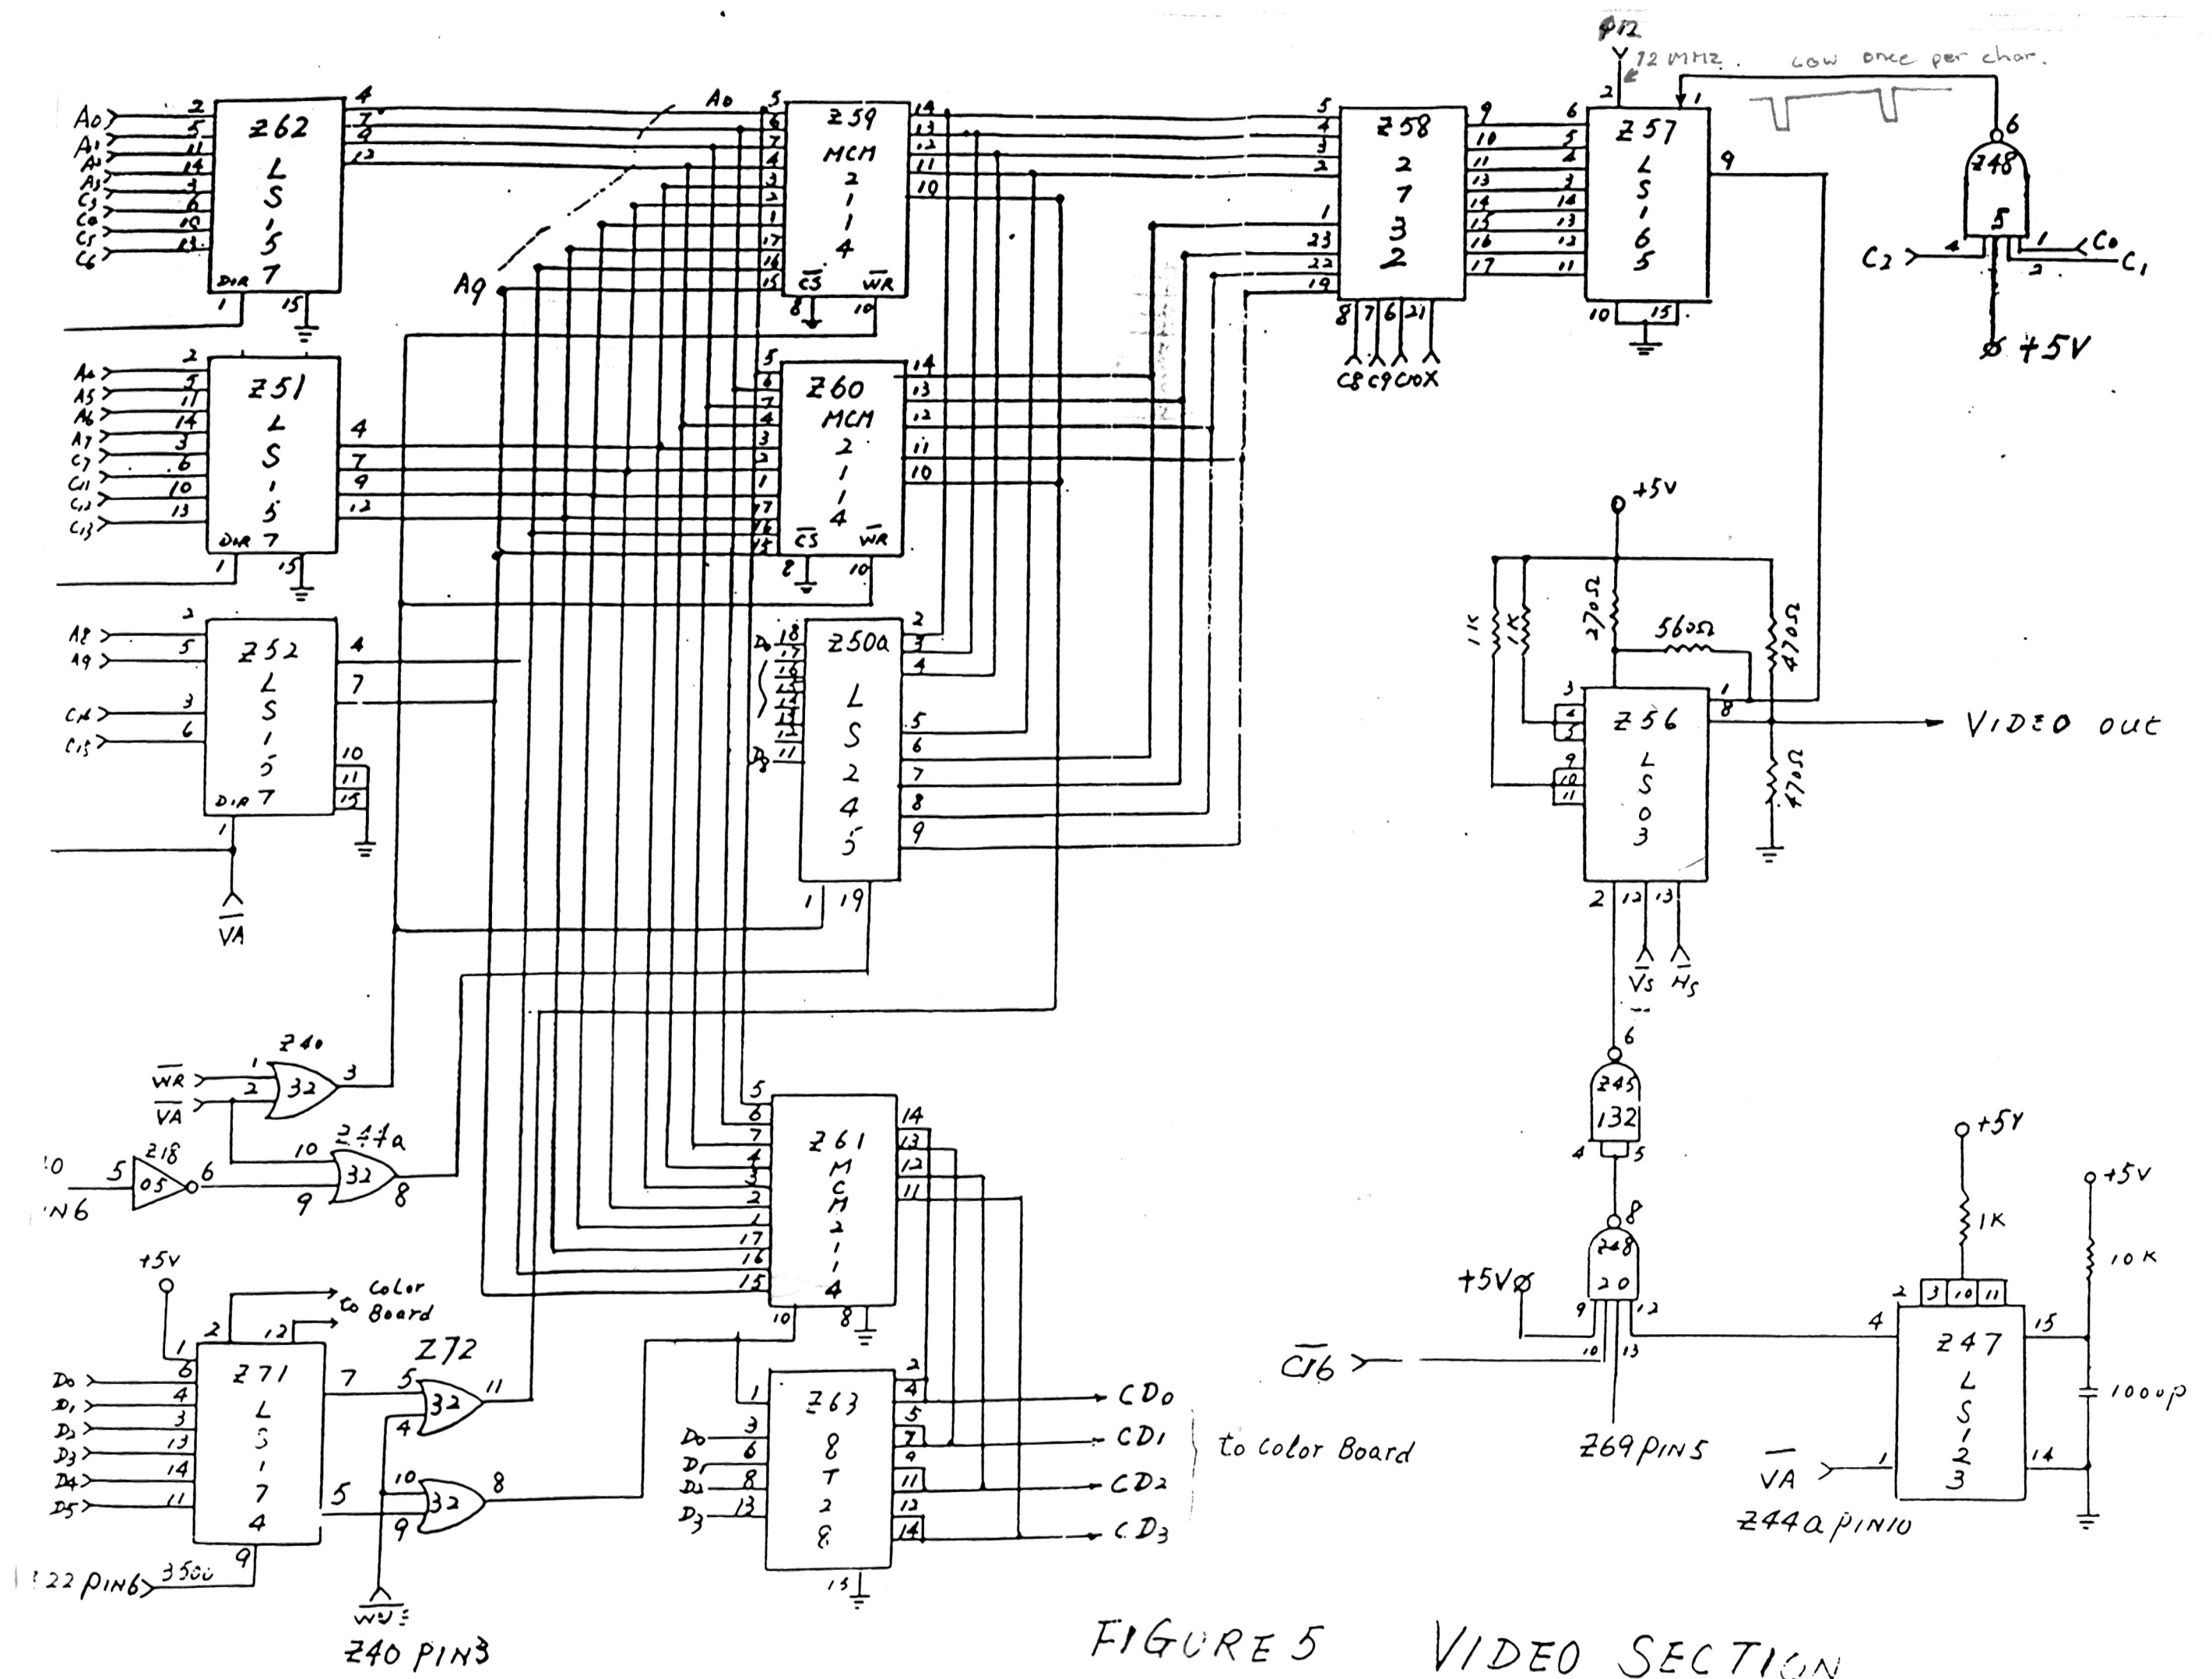


FIGURE 5 VIDEO SECTION